

FH300RC Metal Halide Remote Control Searchlight

User / Installation Manual

Product Part Number:

A7136 – FH300RC 240v 575w Metal Halide Variable Speed Remote Control Searchlight

PLEASE NOTE!

Please read this manual before installation.

Francis
SEARCHLIGHTS

www.francis.co.uk

CONTENTS

1. Introduction
2. Safety Precautions
3. Technical Information
4. Unpacking and Installation Instructions
5. Electrical Installation
6. Start-up and Operating
 - 6.1. FBUS Data & Panel Addresses
7. Fault Finding
 - 7.1. Problems After Installation
 - 7.2. Obtaining Fault Status
8. Maintenance and Servicing
9. Wiring Diagram & General Assembly
10. Spare Parts List

General Information:

Francis Searchlights Ltd

Union Road, Bolton, BL2 2HJ

United Kingdom

T: 00 44 (0)1204 558 960

E: Sales@francis.co.uk

W: www.francis.co.uk

1 – Introduction

It is imperative that this manual is read carefully and understood before installing your equipment. For your future reference please keep this manual in a safe place.

Thank you for specifying a product from the Francis Searchlights range. All Francis products are designed to give complete customer satisfaction and are manufactured to the highest engineering standards to ensure optimum performance and service life.

The Francis FH range combines features proven over many years in the most hazardous conditions in both marine and land installations.

To prolong the life and performance of your product, we recommend that you only specify Francis Searchlights spare parts. This will also ensure that any warranties on your equipment will not be invalidated. Information on spares ordering and parts is provided in this manual.

Should you ever need to contact Francis Searchlights Ltd. regarding your equipment, please always quote the Product Number and Serial Number of the product you have, this is located on the name plate, inside the front of the barrel to the right.

In order that the searchlight operates correctly it is imperative that competent personnel are responsible for the installation, operation, and servicing of this equipment. Failure to adhere to this advice may cause premature failure or incorrect operation of the searchlight, which may damage the equipment or cause personal injury.

2 – Safety Precautions

The following instructions must be adhered to, to ensure a safe working environment and the safety of the user.

Note: When unpacking or manoeuvring the searchlight into its fixing position, suitable lifting points must be used to prevent damage to the equipment or personal injury.

- Only suitably qualified personnel may install the products.
- Prevent rain, snow, condensation, and water droplets from contacting the lamp as this may cause bulb failure and possible shattering.
- Metal Halide bulbs run with a high internal pressure more than atmospheric. Whilst the construction is inherently strong, there is a slight risk of the bulb shattering.
- Never look directly into an illuminated searchlight as this may cause severe damage to eyesight. If it is necessary to inspect a lamp whilst in operation, always wear suitable protective goggles.
- Should it be necessary to examine the lamp with the front bezel removed, always use a protective shield and wear goggles to ensure a safe working environment.
- Never attempt to clean a lamp whilst in use.
- Searchlights get hot. Never touch the unit when lit and always allow 15 to 20 minutes for cooling down after turning the searchlight off.
- Never place anything on or cover the searchlight when in use.
- Ensure the lamp has cooled sufficiently before removal.
- If undue force appears necessary to remove the lamp, the equipment should be inspected by a competent person or contact the manufacturer.
- When breaking a lamp for disposal, care must be taken to ensure the glass fragments are safely contained. This operation must be performed out of doors in free air. In all circumstances refer to the lamp manufacturer's instructions packed with the lamp.
- Due to the vast range of lamps available it may appear possible that more powerful lamps can be used in the equipment than for which it was designed. Even when the unit will physically accept a higher wattage or voltage lamp, this substitution is not recommended and is dangerous. This action will also void any warranties on the equipment.

Always refer to the lamp manufacturer's technical data when dealing with lamps.

3 – Technical Information

Electrical	
Input voltage:	240V AC
Input current:	6.5A
Ballast output voltage:	103V AC
Ballast current:	6.2A
Wattage:	575w
Dimensions	
Height:	843mm
Width:	414mm
Depth:	451mm
Weight:	31Kgs Searchlight – 9.5Kgs Ballast Box
Searchlight Performance	
Lamp power:	575w
Range @ 1 Lux:	3,685m
Lamp life (approx..)	1000h
Divergence:	2.5-10°
PBCP (Peak Beam Candle Power):	13,600,000 cd
Colour temperature:	6000K
Luminous flux:	49,000 lumens
Searchlight movement	
Pan rotation:	365°
Tilt elevation:	Up 35° & Down 40°
Pan speed:	Variable Speed 1 to 19°/sec
Tilt Speed:	Variable Speed 1 to 6°/sec
Material, colour, IP rating	
Searchlight barrel head:	Stainless Steel BS1449 304S31
Gearbox housing:	Stainless Steel BS1449 304S31
Crutch:	Stainless Steel BS1449 304S11
Paint finish powder coated & stove enamel paint:	Ash Grey BS4800 00A01, Umbra Grey RAL 7022
IP rating:	IP66 Gearbox / Ballast Box – IP56 Searchlight
Operating temperature:	-20°C to +50°C (-50°C on request)
Certification approval:	
Lloyds TA:	IEC 60945: 2002
Russian Maritime Register of Shipping:	Parts XI & XVII, Part IV
ISO9001 2015:	Quality Management System

4 – Unpacking and Installation Instructions

The following instructions should be read and fully understood prior to installing the equipment to ensure that the correct procedures are followed, and all safety precautions are observed.

Note: If the equipment has been in storage for a considerable amount of time, it is advisable to conduct a routine maintenance check on all parts before installation.


Safety Precautions

This equipment should not be connected to an electrical supply before being installed. Installation procedures should be adhered to, to ensure a safe working environment and reduce the risk of damage or personal injury.


Preparing the Mounting Position

Mark out and drill the fixing holes through the deck. If anti-vibration mounts are to be fitted, the fixing holes for the mounts should also be marked out and drilled. Prior to manoeuvring the searchlight into its' fixing position, the AV mounts should be fitted to the base. When in the desired position, bolt the searchlight firmly down. On an uneven surface it may be necessary to use a suitable sealant such as silicone, to ensure a weatherproofed joint.

Please refer to the drawing C27312 for the Joystick Panel cut out size, which you can find at the back of this manual.

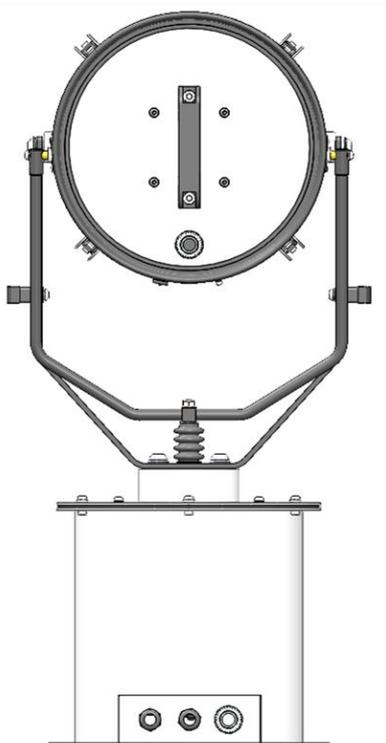

Rear of Searchlight

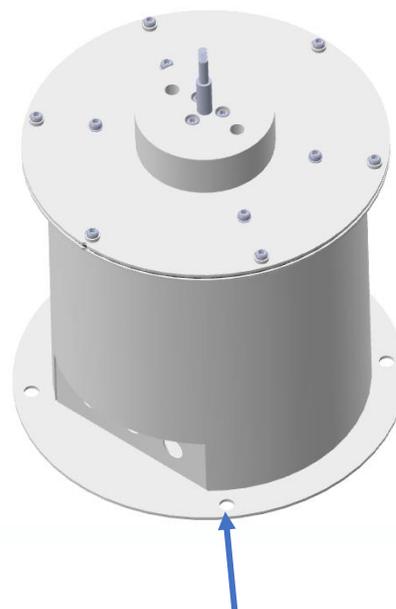

**Base Fixings, 4 Holes $\text{\O}12.5$
Equally Spaced on a $\text{\O}290.00$**

5 – Electrical Installation

For safety purposes, only competent personnel should perform the electrical installation. All equipment should be installed to current Electrical Regulations and Standards.


Referring to wiring diagram C27492 (at the back of the manual), a supply is fed to the ballast box, which then provides a common feed to the motor gearbox, searchlight, and joystick panel.

The searchlight has been pre-wired with 3 meters of cable from the motor gearbox to junction box provided. The searchlight head is pre-wired along with the connecting cable to the motor gearbox.

Cables required to be connected by the customer: -

- 2 pair twisted 0.22mm 100ohm screened cable from the joystick panel to the junction box.
- 5 cores 1.5mm cable from the ballast box to the junction box.
- Mains supply cable to the junction box.

Searchlight

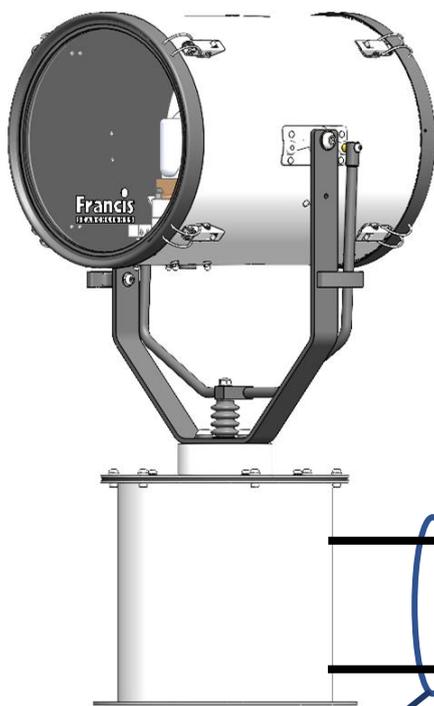

3m of cable supplied by Francis.

5 cores 1.5mm & 2 pair twisted.

Joystick Panel



2 pair twisted screened cable, supplied by customer.

5 cores 1.5mm cable, supplied by customer.

mains supply cable Supplied by customer.



To obtain the maximum light output from the searchlight, it is essential that the full operating voltage of the lamp fitted be applied to the lamp holder contacts.

Method of Electrical Connection

- Disconnect the supply before working on the electrical system.
- The searchlight must be connected to a fused electrical supply, using suitably sized cable.
- If the searchlight is located a considerable distance from the supply, provision must be made in the cable size to overcome the voltage drop.

The following table below indicates the maximum length of cable to be used for the supply cable from the mains supply to the ballast box.

Searchlight	240v 575w
Cable Size (mm ²)	Distance Max
3 cores 1.5mm	54M
3 cores 2.5mm	92M
3 cores 4mm	147M
3 core 6mm	220M
3 cores 10mm	388M

The following table below indicates the maximum length of cable to be used from the ballast box to the junction box.

Searchlight	240v 575w
Cable Size (mm ²)	Distance Max
5 cores 1.5mm	14M
5 cores 2.5mm	23M
5 cores 4mm	37M
5 cores 6mm	56M
5 cores 10mm	97M

- Whenever possible cable terminations should be made below deck and with approved terminal devices.
- If a spare auxiliary fuse or circuit breaker is not available, one of the correct type/ratings should be fitted and connected to a positive supply. It is advisable to locate a bus bar or main connection and avoid any direct connection to the supply.
- For 240v AC products, the following colour coding system should be used for the customer supply cable:

Brown	-	Live
Blue	-	Negative
Green/Yellow	-	Earth

Note: This equipment must be earthed.

6 – Start-up and Operating

When fitting the lamp

- Always isolate the equipment from the supply when inserting a lamp.
- Ensure the circuit is suitably fused.
- Ensure the lamp is of the correct power rating and type.
- Check lamp holder is in good condition. If the contacts show any sign of corrosion, replace the lamp holder.
- Check the lamp holder is in a good dry condition. Never allow water to collect in the lamp fitting or contact with the lamp.

To fit the lamp

- Remove the front bezel assembly by operating the safety catch and lifting the catch body.
- For easier access, the light shield may be removed by undoing the fasteners.
- Use a cloth to prevent touching the glass envelope, position the two pins above the holes in the lamp holder.
- Gently push the lamp into the lamp holder.
- Replace the light shield and front bezel assembly, ensuring the safety catch is engaged.

Testing

Upon correct installation and connection to an electrical supply, the equipment can be tested to ensure its' correct performance. A competent person with some knowledge of electrical equipment must carry out this work.

Equipment required: multi-meter with leads & Ammeter.

Using the equation $P=VI$, the approximate power output of the equipment can be calculated in the following way:

- Using the multi-meter, take a voltage reading.
- Using the ammeter, take an amp reading from the live cable to the lamp.
- Multiply these figures together to give an approximate wattage (Power output).

For example:

Voltage reading = 103v; Amps reading = 6.2 amps; Power factor correction = 0.9

Therefore, Wattage = $103 \times 6.2 \times 0.9 = 575$ watts

Start-Up

When the main power is first applied to the searchlight, the searchlight will carry out a self-test, it will Pan to the left limit and Tilt down to the limit, once this is complete, the searchlight will then move to the centre and horizontal, during this please do not try and operate the searchlight while this test is being carried out. Once the searchlight is back at centre the searchlight can then be operated normally, by pressing the Panel button on the control panel.

Operating

Switch On

The panel is activated using the PANEL button. This will illuminate brightly when the panel is active. Alternate operations of the PANEL button will switch the panel on and off.

Lamp Control

When the panel is active pressing the LAMP, button will switch the lamp on or off. If the control panel is switched off with the PANEL button the lamp will switch off.

Focus Control

The lamp focus can be adjusted using the FOCUS button. Lamp focus will adjust continuously whilst FOCUS is pressed.

Beam Direction

The beam direction can be adjusted using the joystick when the panel is active. Moving the joystick left or right will pan the beam clockwise or anticlockwise. Moving the joystick up or down will move the beam up or down. The speed of movement is proportional to the movement of the joystick. It is possible to move the beam in both directions at once by moving the joystick diagonally.

Home

The searchlight can be returned to a pre-set home position. By default, this is dead ahead with the beam level although different positions can be programmed as described below. To send the searchlight to the home position switch the panel off then press the LAMP button.

Set New Home Position

To set a new home position move the searchlight to the new desired home position. Switch the panel off then press the joystick down to its limit and press the lamp button. The current position will now be the new home position.

Set Motion Limit (only available when Remote Focus is fitted)

The searchlight travel can be limited in either axis or either direction. To set a new limit switch the panel on and move the searchlight to the desired limit position. Switch the panel off then press and hold the focus button whilst moving the joystick full travel in the direction of the desired limit. Hold in this position for 4 seconds. For example, to set a limit to the tilt up motion; -

1. Switch panel on and drive searchlight to desired tilt up limit position.
2. Switch panel off.
3. Press and hold the FOCUS button and hold joystick in the full up position for 4 seconds.
4. Tilt up motion will now be inhibited above the current position.

Clear Motion Limits

Motion limits as set above can be cleared by switching the panel off then pressing and holding the focus button and lamp buttons together for 10 seconds.

Adjusting Panel Illumination

The panel illumination and indicators intensity can be adjusted to suit ambient light levels. To adjust the intensity, switch the panel on then switch it off with the PANEL button and keep the PANEL button pressed. To increase intensity, move the joystick to the right. To decrease move to the left. Note that the panel button must be kept depressed whilst the joystick is moved. All indicators will illuminate whilst adjustments are performed. Adjustment is complete when the panel button is released.



6.1 - FBUS Data & Panel Addresses

The Francis bus (FBUS) is a custom communication protocol based on RS485 two wire bi-directional communication hardware. The system provides a simple bi-directional link between searchlights and control panels. The system allows given panels to communicate with different searchlights and allows several panels to communicate with the same searchlight.


FBUS Address Switches

Setting Searchlight Address Value

The searchlight address is set using the Dip switches on the Speed Controller PCB located inside the Gearbox Assembly (see drawing C29488). With the address switches using simple binary input.

Each switch has a binary value as details below; -

Dip Switch	Searchlight
10	1
9	2
8	4
7	8
6	16

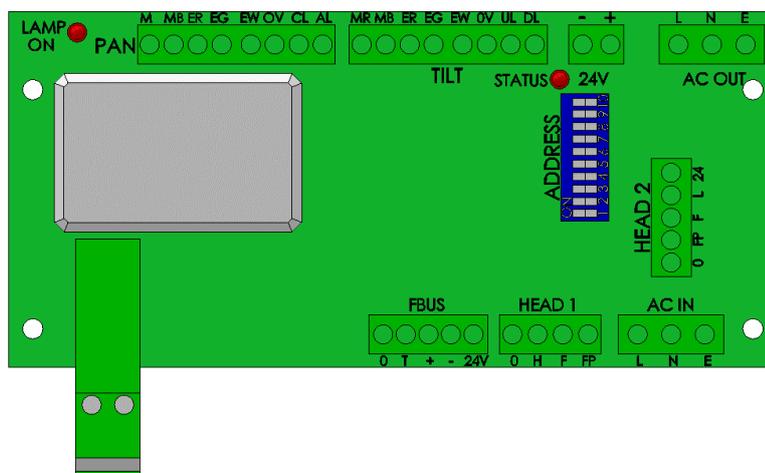

If only 1 Searchlight is used, then all switches will be set to off.


The address value is the sum of the numbers above which are active when the switch is on.

For example, if switches 8 and 10 are on, and all others are off, the address value would be 5.

Note that switches 1-3 are not used for address selection and should be switched off.


Standard Control Panel – Searchlight (Lamp) Address

Dip Switch	Searchlight
1	16
2	8
3	4
4	2
5	1

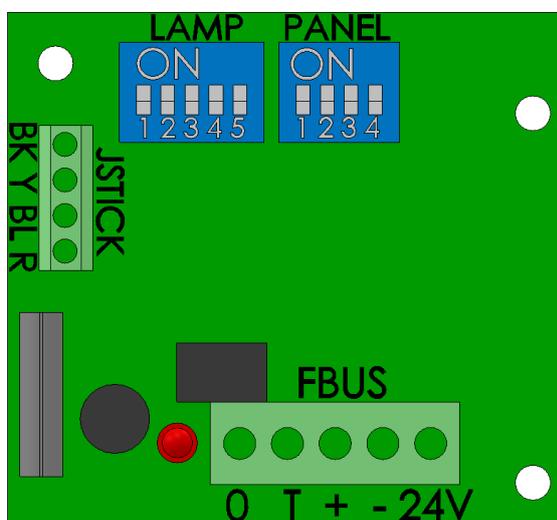

Standard Control Panel – Control Panel Address

Dip Switch	Control Panel
1	8
2	4
3	2
4	1

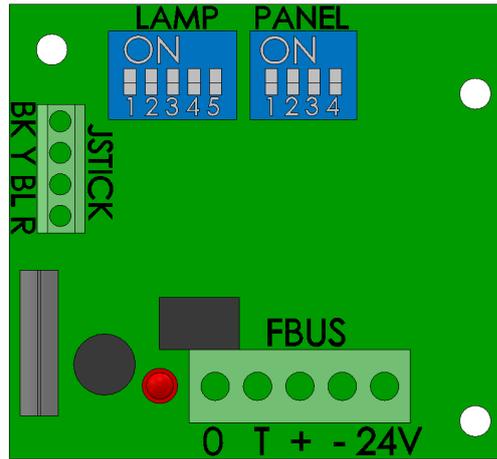

EXAMPLES

Standard control panel – panel address set to 5

Switch 1 = Off

Switch 2 = On (Value 4 added to address)

Switch 3 = Off

Switch 4 = On (Value 1 added to address)

$$4 + 1 = 5$$

Speed control card - lamp address set to 11

Switch 6 = Off

Switch 7 = On (Value 8 added to address)

Switch 8 = Off

Switch 9 = On (Value 2 added to address)

Switch 10 = On (Value 1 added to address)

$$8 + 2 + 1 = 11$$

ADDRESSING SYSTEM


Every searchlight must have a unique address. The addresses should be sequential and should start from zero. If there were three searchlights in a system the addresses should be set to 0, 1 and 2.

Control panel – panel addresses use the same system being sequential and start from zero.

It is essential that all panels have a unique address with no duplication however note that searchlights and panels can be the same address. For example, on a system with two panels and two searchlights, the panel addresses will be 0 and 1 and the lamps addresses will be 0 and 1.

Control panel lamp addresses are defined by the system configuration. If two panels are used to control the same searchlight, they must still have individual panel addresses, but the lamp addresses can be set to the same address value as the searchlight which is to be controlled. Any number of panels can control the same searchlight.

Multiple Searchlights, Control Panels and Master Control Panel

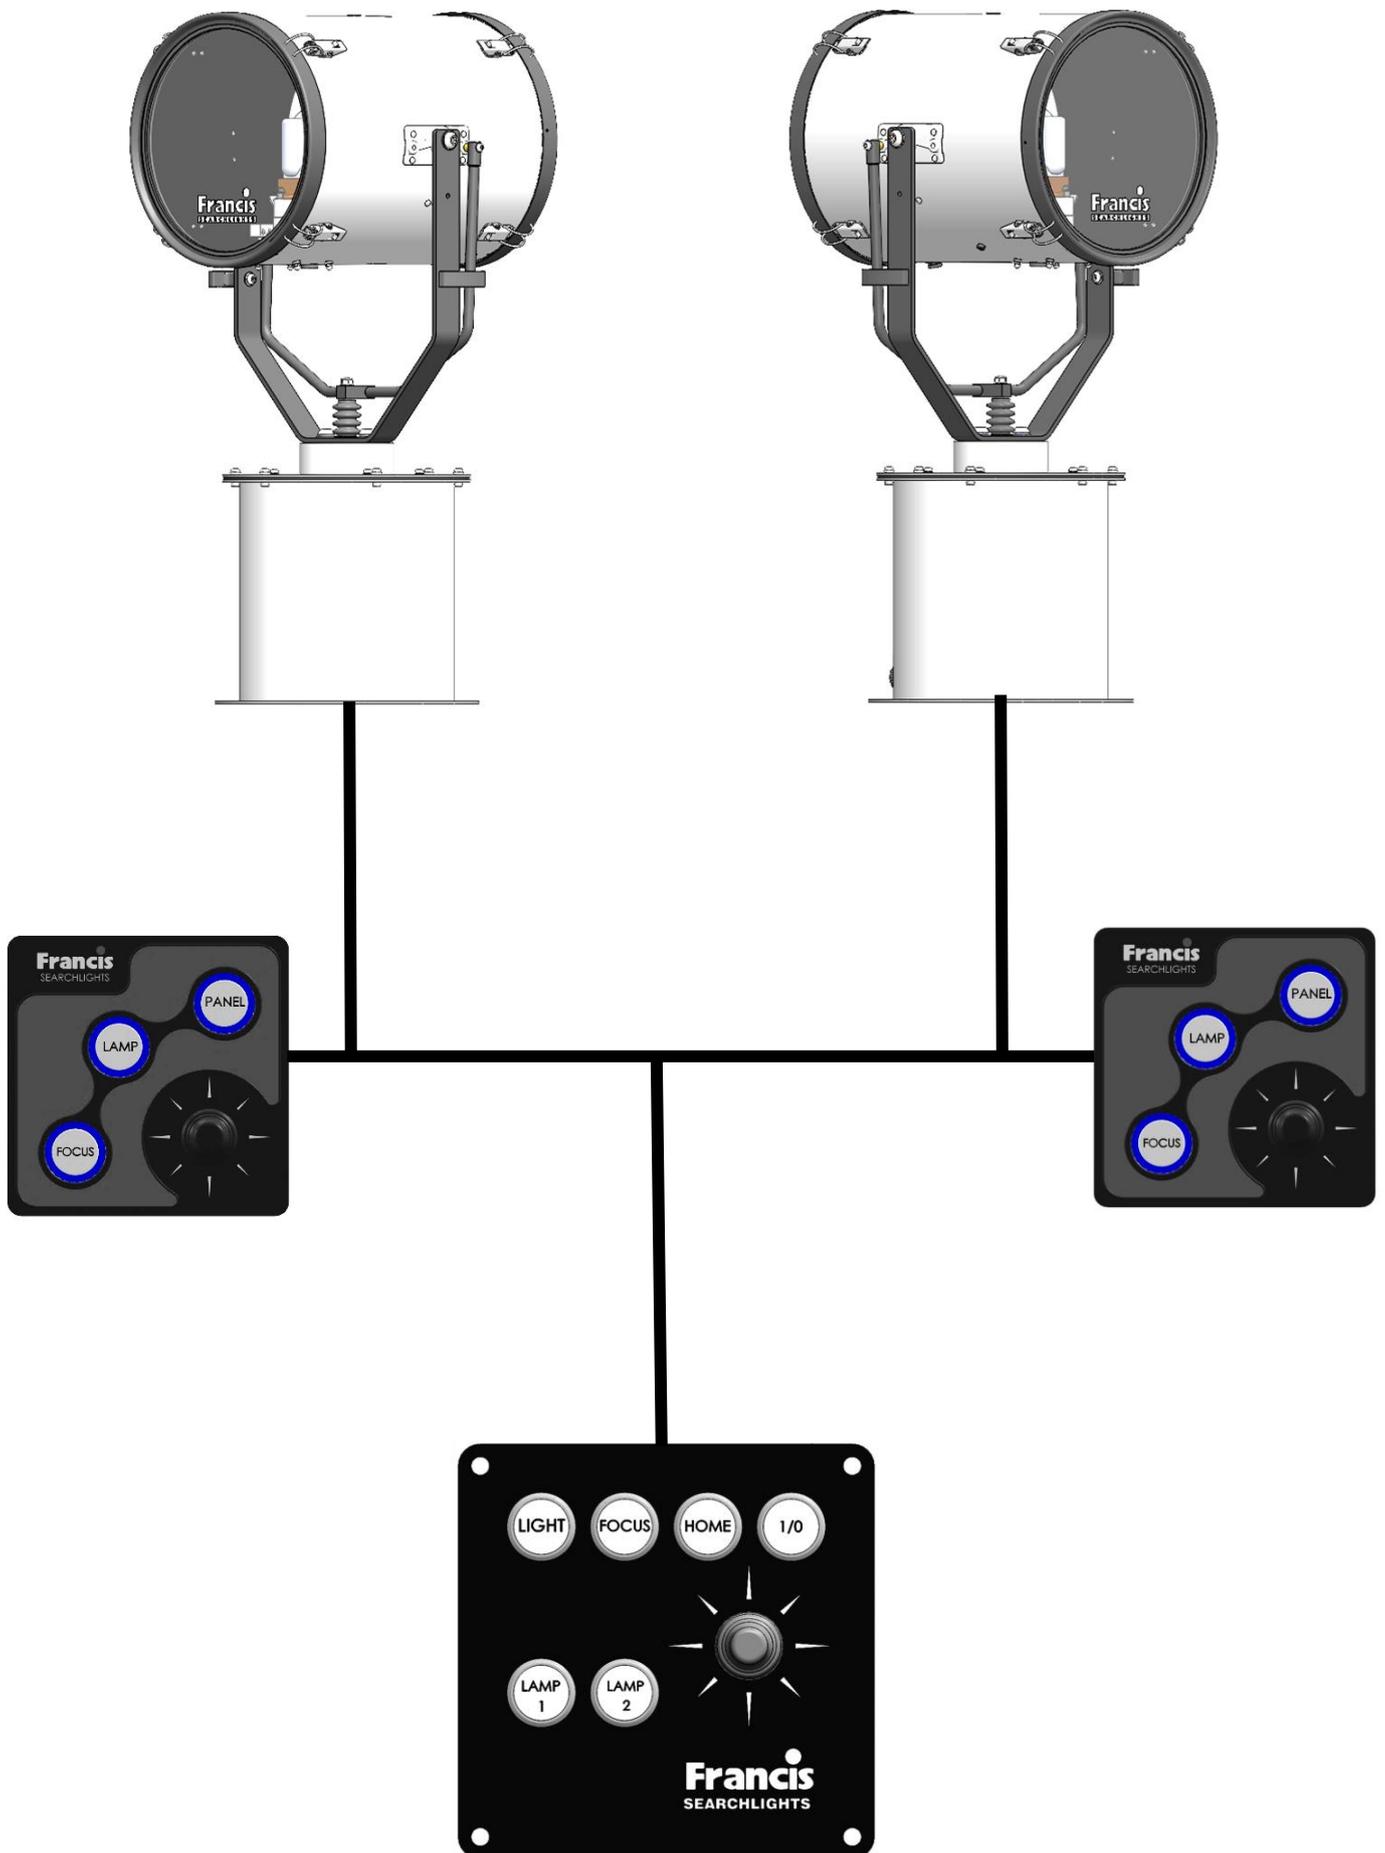

7 – Fault Finding

7.1 Problems at Installation

- If the searchlight completes the Self-Test, e.g., Pan left, Tilts down then returns to centre and the LEDs on the joystick panel are not illuminate, then please check the 4 data cables connections on the FBUS connector located on the back of the control panel assembly, as these data cables could be swapped around, you can check the voltages on the 4 connections, you should get as shown below:
 - 0 & + = 2.2v DC
 - 0 & - = 2.2v DC
 - 24 & 0 = 18-24v DC
- If the searchlight completes the Self-Test, e.g., Pan left, Tilts down then returns to centre and the LEDs on the joystick panel are illuminated, but you are unable to control the searchlight via the control panel, then please check the data + & - connections on the FBUS connector located on the back of the control panel assembly, as these data cables could be swapped around.
- If you have more than 1 searchlight in the installation and 2 or more searchlights are moving at the same time in the same direction, then please check the dip switch settings on the speed controller PCB, see **Setting Searchlight Address Value**.

Failure of Lamp to light


- Firstly, check supply at lamp holder connecting block (within searchlight barrel). If supply is present, disconnect unit from power supply before removing the lamp. Replace lamp ensuring all precautions and instructions previously outlined in this manual are adhered to.

7.2 - Problems After Installation

Please note, if the searchlight does not complete the self-test, you will not be able to operate the searchlight in any direction or switch the lamp on. Please refer to section **7.3 Obtaining Fault Status** below, to confirm the fault.

Once you have confirmed the fault via the control panel, please contact Francis Searchlights for ordering the required parts, sales@francis.co.uk

If the control panel is not communicating with the searchlight and none of the LED's on the control panel are lighting up, then you will need to access the speed controller PCB inside the gearbox (see drawing C29488), to access the speed controller PCB you will need to remove the 6 off M6 screws that hold the motor top to the gearbox housing and then lift the searchlight up out of the gearbox housing, taking care not to damage the assembly, the Status LED located near the top of the card (labelled "STATUS") on the speed controller PCB, shown below.

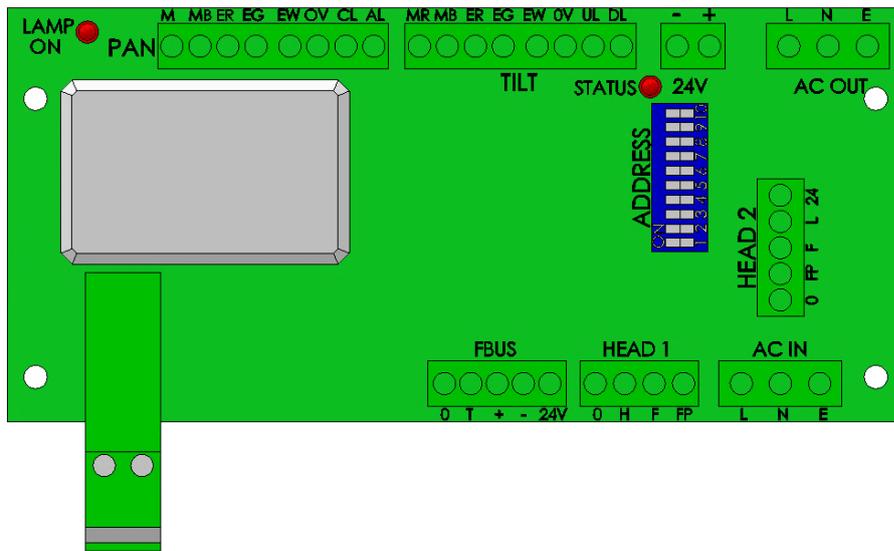

During faults normal status LED operation is overridden. The status LED will flash red several times with the number of flashes corresponding to the specific fault. If there are multiple faults the LED will flash accordingly with a gap between each fault flash sequence. Fault details are provided on the next page, with the number of flashes indicated on the left.

The Status LED has several functions as detailed below.

Software Version

When power is applied to the speed control card the status LED will flash green. The number of flashes corresponds to the software version.

FBUS Normal operation

When the system is operating from FBUS the status LED will illuminate static green. When a valid FBUS data signal is received the LED will switch off momentarily to indicate data reception. If data is continuous the LED will flash green slowly.

If the Status LED does not light up, then please check the 24v DC supply from the PSU within the gearbox, as shown on drawing C29488 Item 6, if there is no output from the PSU then this will need to be replaced.

7.3 - Obtaining Fault Status

Fault codes can be accessed, with the control panel switched off, press the PANEL button and keeping the PANEL button pressed for 10 seconds. Fault codes are indicated by the PANEL button flashing several times related to the fault. Fault codes are detailed below. If more than one fault is present the PANEL button will indicate them in sequence.

1. Pan Limit. – Either of the pan limit switches operated. Note that this may not actually be a fault. The LED will flash when a limit switch is operated under normal circumstances i.e., the lamp is at the limit of travel. This will also indicate when a variable limit is reached.
2. Tilt Limit. – Either of the tilt limit switches operated. Note that this may not actually be a fault. The LED will flash when a limit switch is operated under normal circumstances i.e., the lamp is at the limit of travel. This will also indicate when a variable limit is reached.
3. Pan motor over current. – The pan motor is taking excessive current. The motor will be disabled for a period when this occurs. Fault indication will remain until power is removed or the fault is corrected.
4. Tilt motor over current. – The tilt motor is taking excessive current. The motor will be disabled for a period when this occurs. Fault indication will remain until power is removed or the fault is corrected.
5. Focus motor over current. – The focus motor is taking excessive current. The motor will be disabled for a period when this occurs. Fault indication will remain until power is removed or the fault is corrected.
6. FBUS interface over current. – The speed control card supplies 24VDC to the remote-control panels. This fault indicates the 24VDC output is taking excessive current. The FBUS supply output will switch off. To restore this output, remove the supply from the speed control card for a period.
7. Anti-condensation heater output over current. – The 24VDC anti condensation heater output is taking excessive current. The heater output will switch off. To restore this output, remove the supply from the speed control card for a period.
8. Limit Switch Error. Some lamp types do not use all or some limit switches. If an invalid limit switch input is detected it is probable the speed control card is set to the wrong product or there is a wiring error.
9. Datum Error. The start-up datum system has not completed correctly.
10. Product type not set or corrupt. The product type has not been set, has been set incorrectly or is corrupt.
11. Supply voltage out of tolerance. The 24V supply is outside the range 18-30V.

8 - Maintenance and Servicing

To prolong the service life and performance of your searchlight, the following maintenance guidelines are recommended:

- Maintenance checks should be conducted before every voyage or at least every three months.
- Before checking, disconnect the equipment from the supply.
- Visually inspect the condition of the equipment.
- Any major or minor structural damage should be rectified immediately to reduce sympathetic wear.
- After inspection it may be necessary to clean the inside of the searchlight. The following procedure should be adhered to:
 - Remove the front bezel.
 - Clean the front glass inside and out using a proprietary glass cleaner.
 - Clean the reflector if required.
 - Ensure that the lamp holder is free from corrosion or other damage.
- It is advisable to check all seals and gaskets for signs of degradation. Renew if necessary.
- The searchlight is fitted with a breather unit. This ensures a steady airflow to prevent any vacuum forming within the barrel.
- Upon completing all maintenance requirements, the searchlight should be tested for full working order (approximately 20 minutes).

If in any doubt as to the correct servicing procedures to adopt, please contact your distributor/agent or Francis who will be able to advise the best course of action for your product.

9 - Wiring Diagram & General Assembly

Drawing No:	Description
A7136	FH300RC 575w Explorer General Assembly
C27492	Wiring Diagram
C27312	Joystick Panel Assembly Remote Focus
C28916	Junction Box Assembly
C21294	Control Gear Assembly
C27491	Barrel Assembly
C29488	Gearbox Assembly

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT	
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1
1:2	1:2	Angular: 1													16
ALL DIMENSIONS IN MILLIMETRES															

DRAWN	D.S.	DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT	
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	


DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

DATE	SCALE	TOLERANCES	MATERIAL	FINISH	DESCRIPTION	FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU		FH300RC 575W EXPLORER 2023 GA		PART NO./REV. NO.		A1 CONT ON SHEET		SMT			
9.1.17	1:2	See Config 1, ISO 8845 010 2nd Config to ISO 8062 C18 Hole centres & pans. 1													A 7136 1	16	
1:2	1:2	Angular: 1													16	16	
ALL DIMENSIONS IN MILLIMETRES																	

ITEM	PART No.	DRG No.	DESCRIPTION	QTY
1	C27491	C27491	BARREL ASSY	1
2	C29488	C29488	MOTOR UNIT ASSY	1
3	C24458	C24458	U-PIECE ASSY	1
4	C24456	C24456	CRUTCH SUB ASSY	1
5	C20270	C20270	BELLOWS TOP BUSH	1
6	C27546	C27546	U-PIECE BLOCK BUSH	1
7	C10109	X2644	TRUNNION SPACER	2
8	C23329	C23329	U-PIECE BUSH	2
9	C20281	C20281	BELLOWS	1
10	C23281		M20 CONDUIT GLAND	1
11	C24710		M20 SEALING WASHER	1
12	C23280		M20 CONDUIT	1.1M
13	C10158		M20 CABLE GLAND	1
14	C27121		M20 CABLE GLAND	1
15	C20943		LIFTING HANDLE	2
16	C21967		Ø RING	1
17	C20341		5 CORE 1.5mm CABLE	4M
18	C24827		2 PAIR TWISTED CABLE	4M
19	C13873		1.5mm S/C CABLE BLACK	2.5M
20	C13872		1.5mm S/C CABLE RED	2x 2.5M
21	C15112		1.5mm S/C CABLE G/Y	2.5M
22	C15838		1.5mm S/C CABLE BLUE	2.5M
23	C28905		1.5mm S/C CABLE GREY	2.5M
24				
25	C22036		ISOLATE SUPPLY LABEL	3
26	C21464		230V WARNING LABEL	3
27	C08369		M12 x 20 BUTTON HD SCREW	4
28	C23746		M8 x 25 BUTTON HD SCREW	2
29	C09580		M6 x 25 BUTTON HD SCREW	2
30	C08370		M12 PLAIN WASHER	4
31	C12133		M12 S/C SPRING WASHER	2
32	C06999		M8 PLAIN WASHER	3
33	C26994		M8 PLAIN FORM C WASHER	1
34	C15041		M8 S/C SPRING WASHER	2
35	C06997		M6 PLAIN WASHER	2
36	C12354		M8 NYLOC NUT	1
37	C28426	C28426	CRUTCH BASE SEAL	1

NOTE:-
ATTACH ITEMS (25) & (26) TO
SEARCHLIGHT REAR COVER,
MOTOR UNIT & JUNCTION BOX

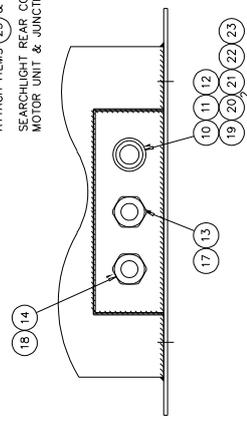

BASE FIXINGS
4 HOLES Ø12.50 ON A 290.00 P.C.D.

FRANCIS SEARCHLIGHTS LIMITED UNION ROAD BOLTON BL2 2HU

DESCRIPTION
FH300RC 575W EXPLORER 2023 GA

MATERIAL

TOLERANCES
Scale Config 1, ISO 8845 010
2nd Config to ISO 8062 C18
Hole centres & pans. 1


STANDARD PRACTICE
Debur all cut/machined edges
Break corners R0.25(Max) U.O.S.



© 2017 A1 CONT ON SHEET

PART NO./REV. NO.
A 7136 1

SMT

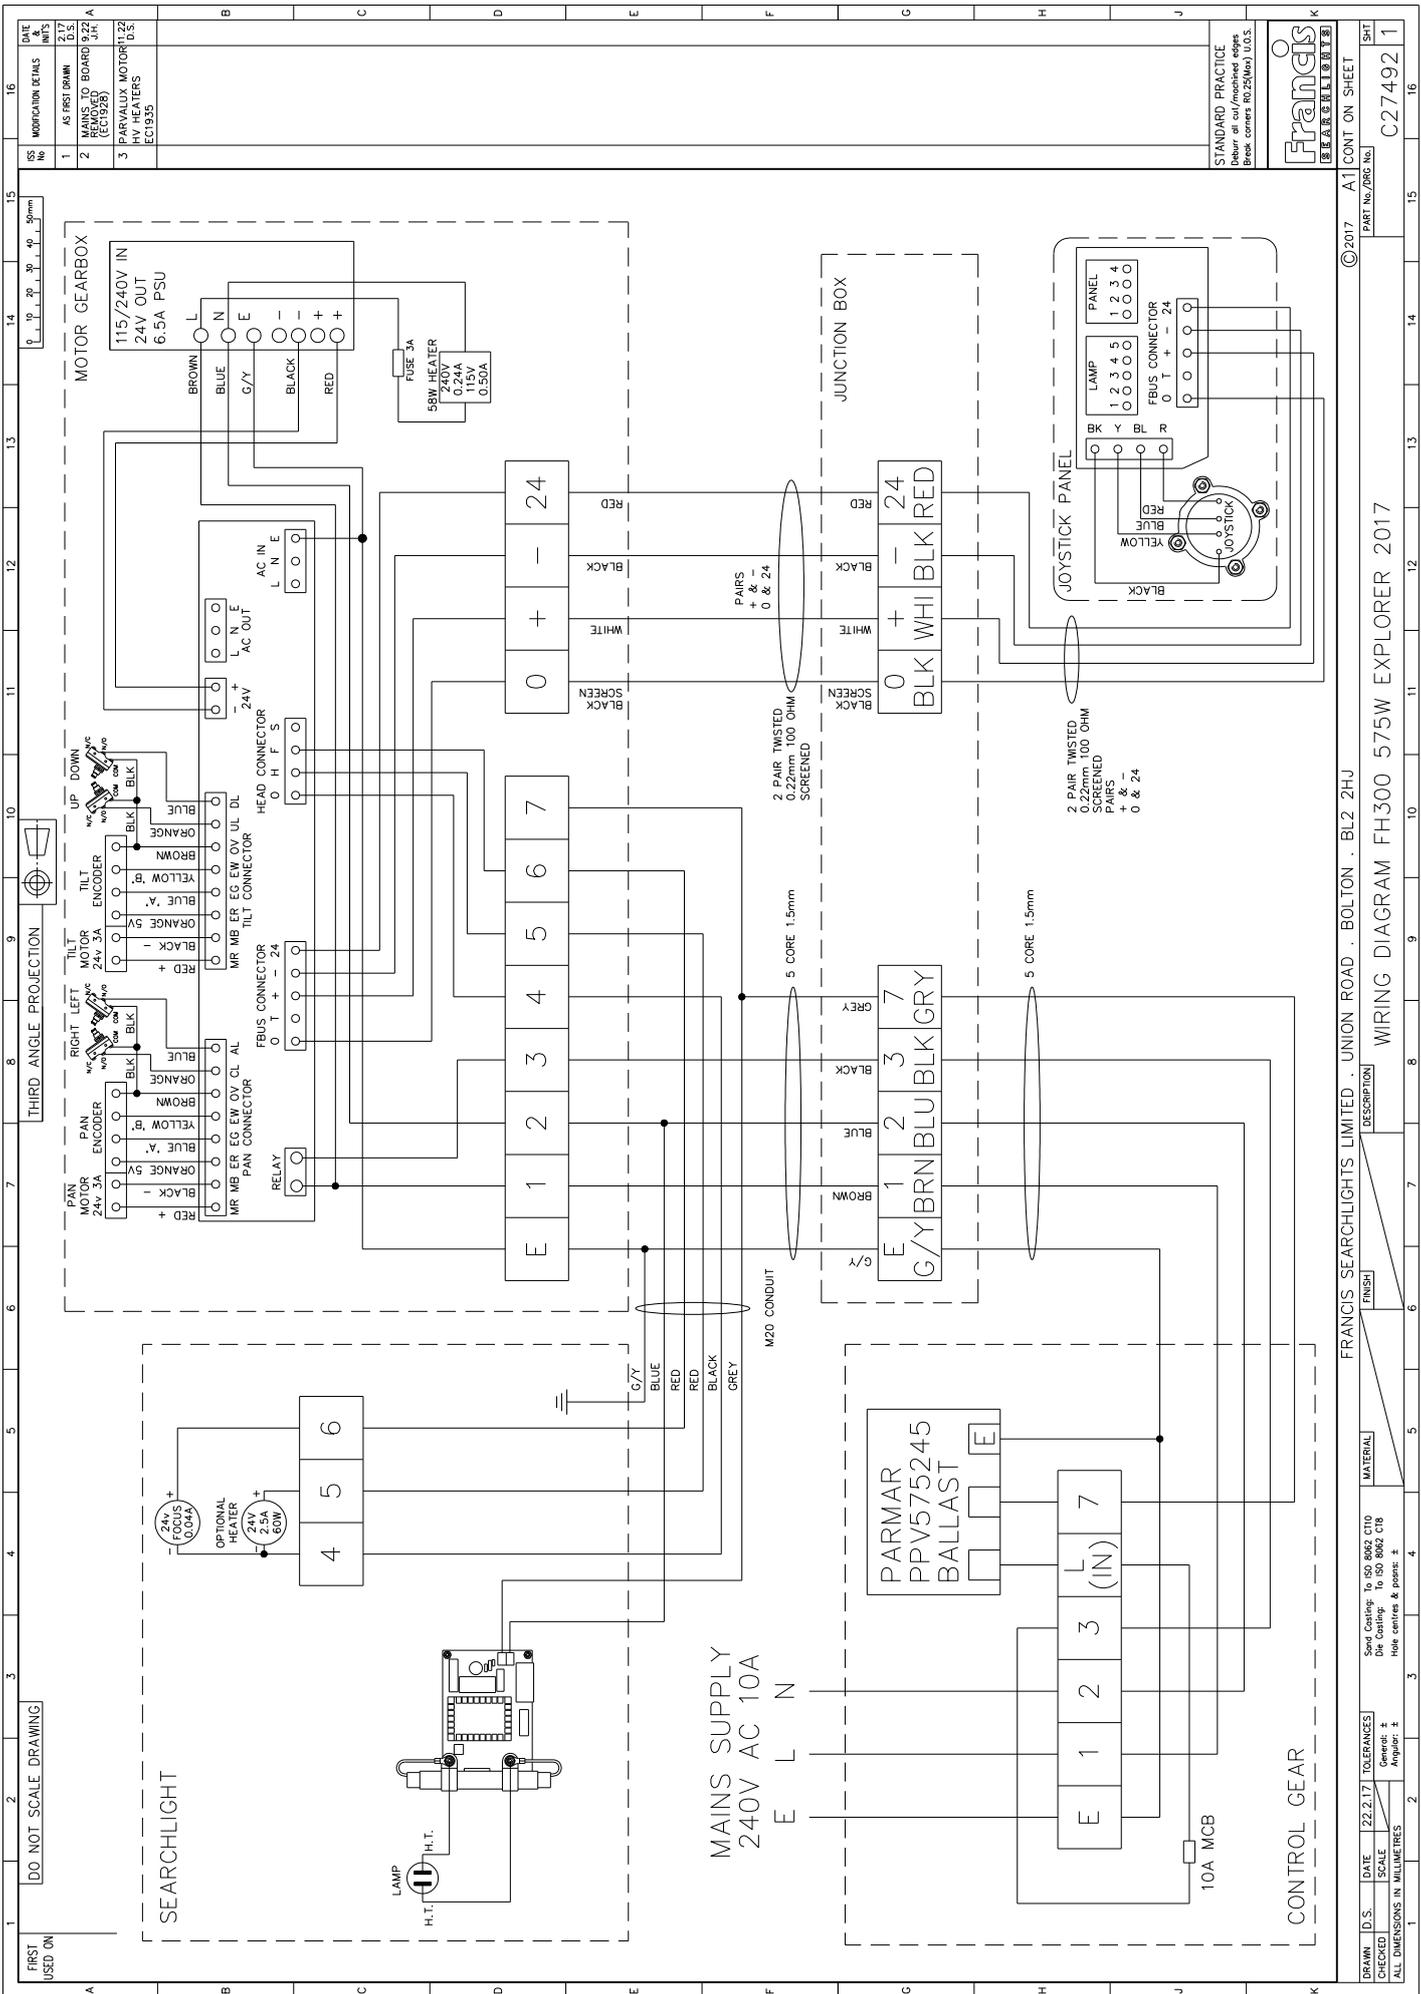

REV	NO	MODIFICATION DETAILS	DATE & INITIALS
1	1	AS FIRST DRAWN	2.17
2	2	MAINS TO BOARD 9.22 REMOVED (CG240)	J.H. A
3	3	PARVALUX MOTOR H.T. HEATERS EC9355	D.S.

STANDARD PRACTICE
Debur all cut/machined edges
Break corners R0.25(Min) U.O.S.

Francis
SEARCHLIGHTS LIMITED

©2017 A1 CONT. ON SHEET
PART No./REV No.
C27492 1


FRANCIS SEARCHLIGHTS LIMITED, UNION ROAD, BOLTON, BL2 2HU

DESCRIPTION: WIRING DIAGRAM FH300 575W EXPLORER 2017

FINISH: []

MATERIAL: []

DRAWN	D.S.	DATE	22.2.17	TOLERANCES	See Cg 100
CHECKED	J.H.	SCALE	1:1	CONFORMS TO	BS 6841
ALL DIMENSIONS IN MILLIMETRES		Hole centres & pitch ± 0.1		Hole diameters ± 0.05	

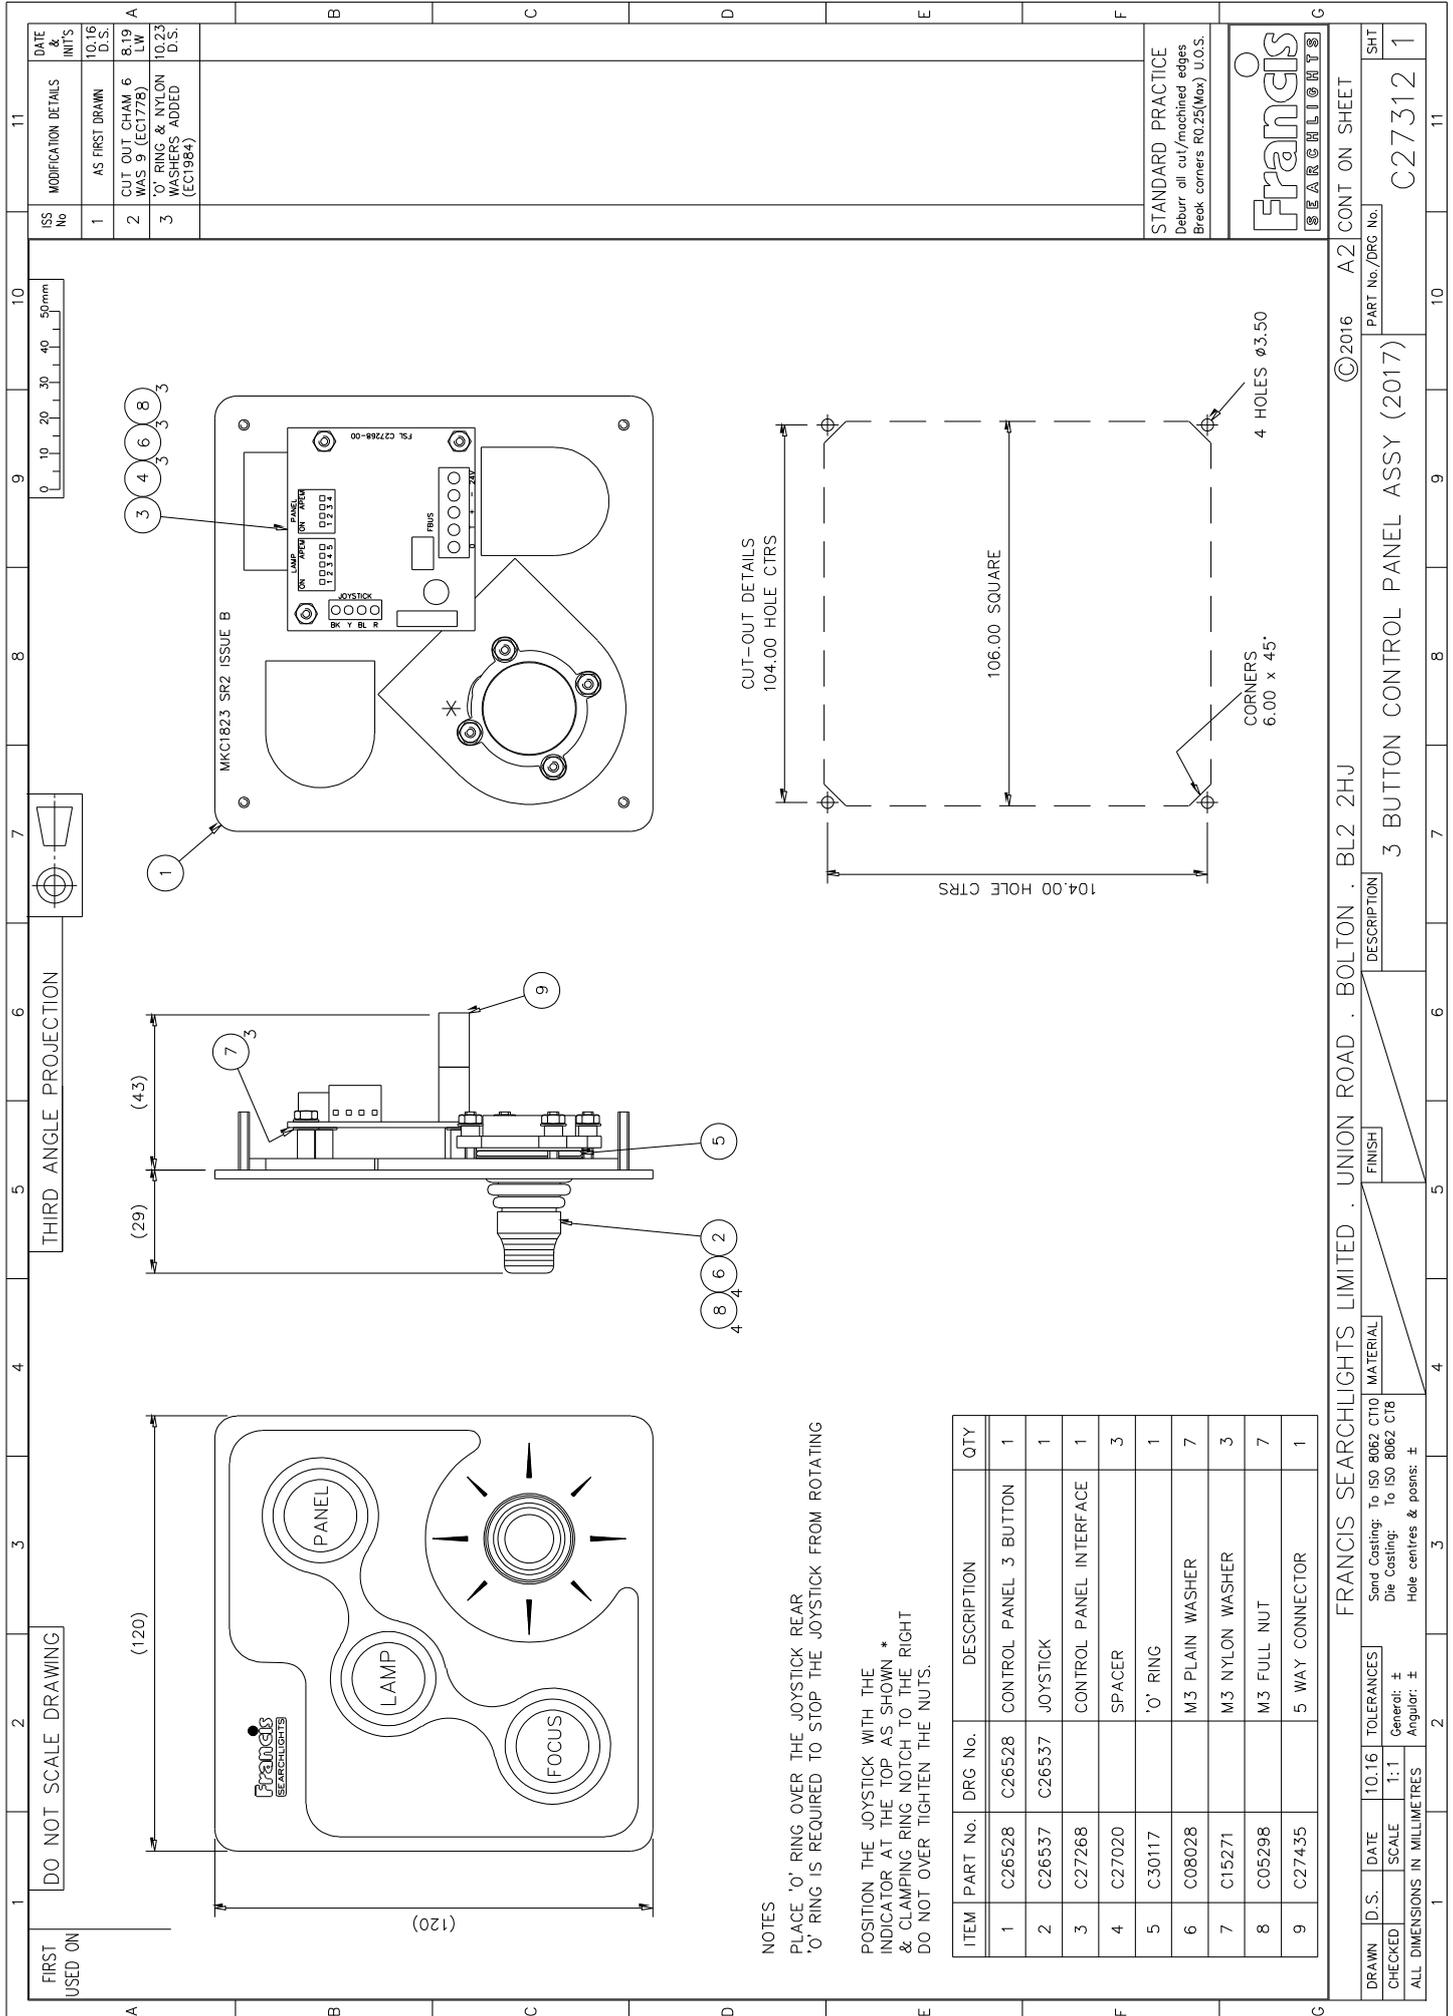

DO NOT SCALE DRAWING

THIRD ANGLE PROJECTION

ISS No	MODIFICATION DETAILS	DATE & INIT'S
1	AS FIRST DRAWN	10.16 U.O.S.
2	CUT OUT CHAM 6 WAS 9 (ECT177B)	8.19 LW
3	'O' RING & NYLON WASHERS ADDED (ECT1984)	10.23 D.S.

STANDARD PRACTICE
Deburr all cut/machined edges
Break corners R0.25(Max) U.O.S.



CONT ON SHEET	A2	11
PART No./DRG No.	C27312	
SHT	1	

NOTES

PLACE 'O' RING OVER THE JOYSTICK REAR
'O' RING IS REQUIRED TO STOP THE JOYSTICK FROM ROTATING

POSITION THE JOYSTICK WITH THE INDICATOR AT THE TOP AS SHOWN *
& CLAMPING RING NOTCH TO THE RIGHT
DO NOT OVER TIGHTEN THE NUTS.

ITEM	PART No.	DRG No.	DESCRIPTION	QTY
1	C26528	C26528	CONTROL PANEL 3 BUTTON	1
2	C26537	C26537	JOYSTICK	1
3	C27268	C27268	CONTROL PANEL INTERFACE	1
4	C27020	C27020	SPACER	3
5	C30117	C30117	'O' RING	1
6	C08028	C08028	M3 PLAIN WASHER	7
7	C15271	C15271	M3 NYLON WASHER	3
8	C05298	C05298	M3 FULL NUT	7
9	C27435	C27435	5 WAY CONNECTOR	1

FRANCIS SEARCHLIGHTS LIMITED . UNION ROAD . BOLTON . BL2 2HU

DRAWN	D.S.	DATE	10.16	TOLERANCES	FINISH	DESCRIPTION
CHECKED		SCALE	1:1	General: ± Angular: ±		3 BUTTON CONTROL PANEL ASSY (2017)
ALL DIMENSIONS IN MILLIMETRES				MATERIAL Sand Casting: To ISO 8062 CT10 Die Casting: To ISO 8062 CTB Hole centres & posns: ±		

© 2016

FIRST USED ON

DO NOT SCALE DRAWING

THIRD ANGLE PROJECTION




0 10 20 30 40 50mm

ISS No	1	DATE	12.20
MODIFICATION DETAILS	AS FIRST DRAWN	INT'S	D.S.

BOX FIXING CENTRES 163.5 x 163.5 (M4)

IN 2 POSN'S

IN 2 POSN'S

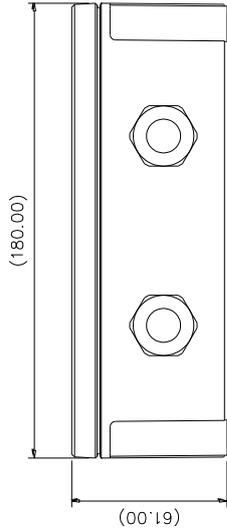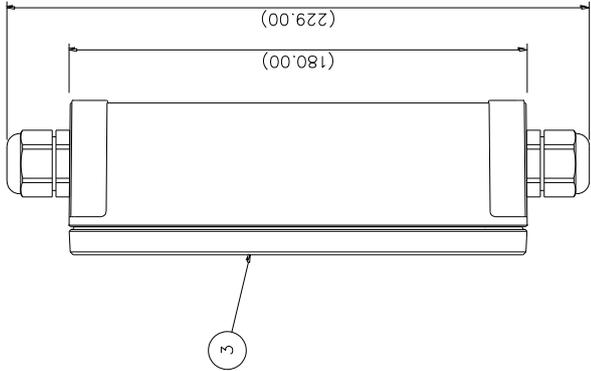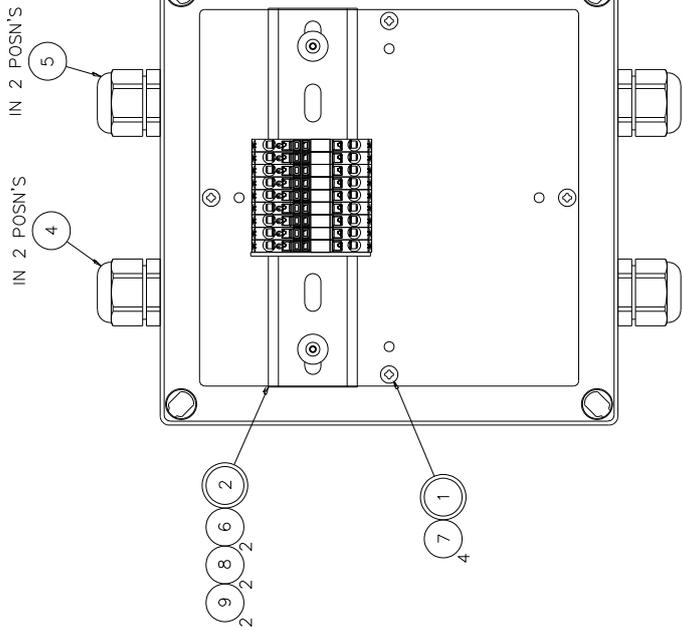

ITEM	PART No.	DRG No.	DESCRIPTION	QTY
1	C23602	C23602	CHASSIS PLATE ASSY	1
2	C28915	C28915	JUNCTION BOX DIN RAIL ASSY	1
3	C26684	C26684	JUNCTION BOX DRILLING	1
4	C10158		M20 GLAND	2
5	C27121		M20 GLAND	2
6	C10207		M3 x 8 BUTTON HD SCREW	3
7	C23598		ø4 x 8 PAN HD POLYIMATE SCREW	4
8	C20637		M4 x 12 O/D WASHER	2
9	C10747		M3 S/C SPRING WASHER	2

STANDARD PRACTICE
 Debur all cut/machined edges
 Break corners R0.25(Max) U.O.S.



© 2020 A1 CONT ON SHEET
 PART No./DRG No. C28916 1
 SHT 1

FRANCIS SEARCHLIGHTS LIMITED · UNION ROAD · BOLTON · BL2 2HU

JUNCTION BOX ASSY

DRAWN	D.S.	DATE	23.12.20	TOLERANCES	Solid Castings: To ISO 8002 C10
CHECKED		SCALE	1:1	General: ±	Die Castings: To ISO 8002 C18
		ALL DIMENSIONS IN MILLIMETRES		Angular: ±	Hole centres & posns: ±

FINISH

DESCRIPTION

JUNCTION BOX ASSY

FRANCIS SEARCHLIGHTS LIMITED · UNION ROAD · BOLTON · BL2 2HU

© 2020 A1 CONT ON SHEET
 PART No./DRG No. C28916 1
 SHT 1

ISS No	MODIFICATION DETAILS	DATE & INT'S
1	AS FRST DRAWN	3.98 D.S.
2	BALLAST BRKT ADDED (EC0652)	6.98 D.S.
3	CONTROL GEAR ASSY REVISED. (EC0711)	2.99 SJJ
4	ITEM 7 B.I.L.W.D. DELETED (EC0736)	7.99 RJM
5	ITEM REFS REVISED TO SUIT NEW DRG. C21294 & C21294. N0DED TO DRG. (EC0794)	4.00 SJJ
6	PART No. CORRECTION	04.01 R.L.
7	BALLAST MOD.	6.01 D.S.
8	EXTRA EARTH ADDED	6.05 M.T.
9	GLANDS & TERMINALS CHANGED FOR NEW IDENTR. (EC100)	8.05 M.T.
10	REDUCED ENC. SIZE (PART No. WAS C20094)	10.06 D.S.
11	C10158 HAS REPLACED C12415	4.08 LW
12	C24230 ADDED	5.08 D.S.
13	FUSE 10A WAS 20A	1.12 D.S.
14	TERMINAL BLOCK NOW FREE ISSUED	5.13 LW
15	FUSE & CARRIER REMOVED MCB ADDED	5.13 LW
16	TERMINAL BLOCK ADDED	1.16 LW
17	BROUGHT IN-LINE WITH DETAIL (EC1676)	1.18 D.S.
18	REDESIGNED TO SUIT FIXINGS SUPPLIED WITH ENCLOSURE (EC1985)	11.23 D.S.




ITEM	PART No.	DRG No.	DESCRIPTION	QTY	QTY
1	C23639	C23639	CHASSIS PLATE S/ASSY	1	1
2	C23640	C24231	ENCLOSURE DRILLING	1	1
3	C24231	C24231	ENCLOSURE DRILLING	1	1
4	C28383	C24231	ENCLOSURE DRILLING	1	1
5	C22268		BREATHER ASSY	1	1
6	C27064	C24143	DIN RAIL	1	1
7	C10158		M20 GLAND	2	2
7	C12415		M20 GLAND	3	3
8	C20537		BALLAST	1	1
9	C26986		10AMP MCB	1	1
10	C10213		M6 x 12 PAN HD SCREW	6	6
11	C10554		M6 S/C SPRING WASHER	6	6
12	C06997		M6 PLAIN WASHER	6	6
13	C15133		TERMINAL BLOCK	10	10
14	C10129		M3 x 20 BTN HD SCREW	2	2
15	C10747		M3 S/C SPRING WASHER	2	2
16	C08028		M3 PLAIN WASHER	2	2
17	C05298		M3 FULL NUT	2	2

DRAWN	D.S.	DATE	3.98	TOLERANCES	General: ±	Angular: ±
CHECKED	SCALE	1:2				
ALL DIMENSIONS IN MILLIMETRES						

FINISH	DESCRIPTION	PART No./DRG No.	SHT
	575W CONTROL GEAR ASSY	C21294	1

DO NOT SCALE DRAWING

VIEW WITH LID REMOVED
FIXINGS SUPPLIED WITH ENCLOSURE

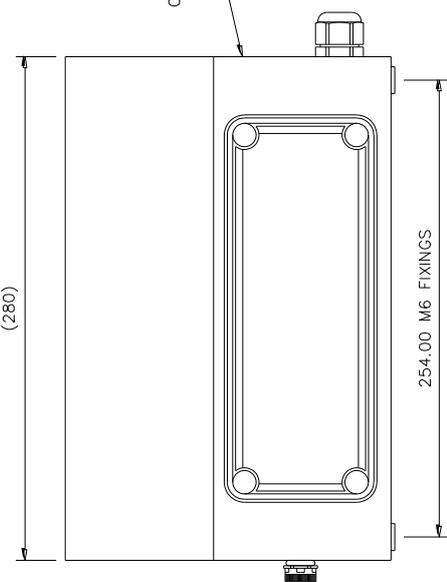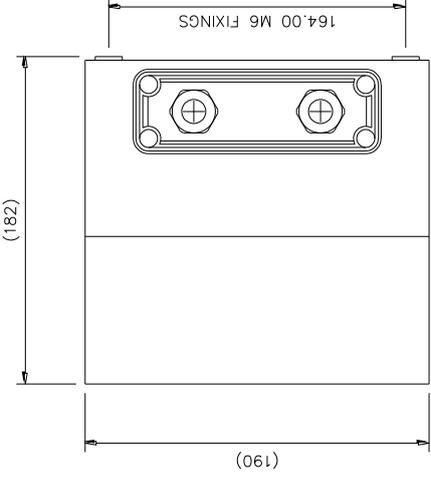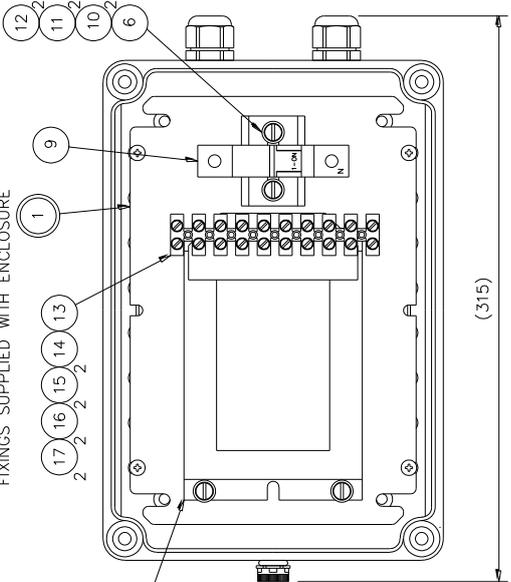

C21294 575W CONTROL GEAR ASSY (DECK & EXP)
 C24230 575W CONTROL GEAR ASSY (RF)
 C28384 575W CONTROL GEAR ASSY (TWIN HEAD)

FRANCIS SEARCHLIGHTS LIMITED · UNION ROAD · BOLTON · BL2 2HU

Standard Casting: To ISO 8062 CT10
 Die Casting: To ISO 8062 C18
 Hole centres & posns: ±


© 1998 A2 CONT ON SHEET



FRANCIS SEARCHLIGHTS LIMITED


STANDARD PRACTICE
 Deburr all cut/machined edges
 Break corners R0.25(Max) U.O.S.

C27491 Barrel Assembly

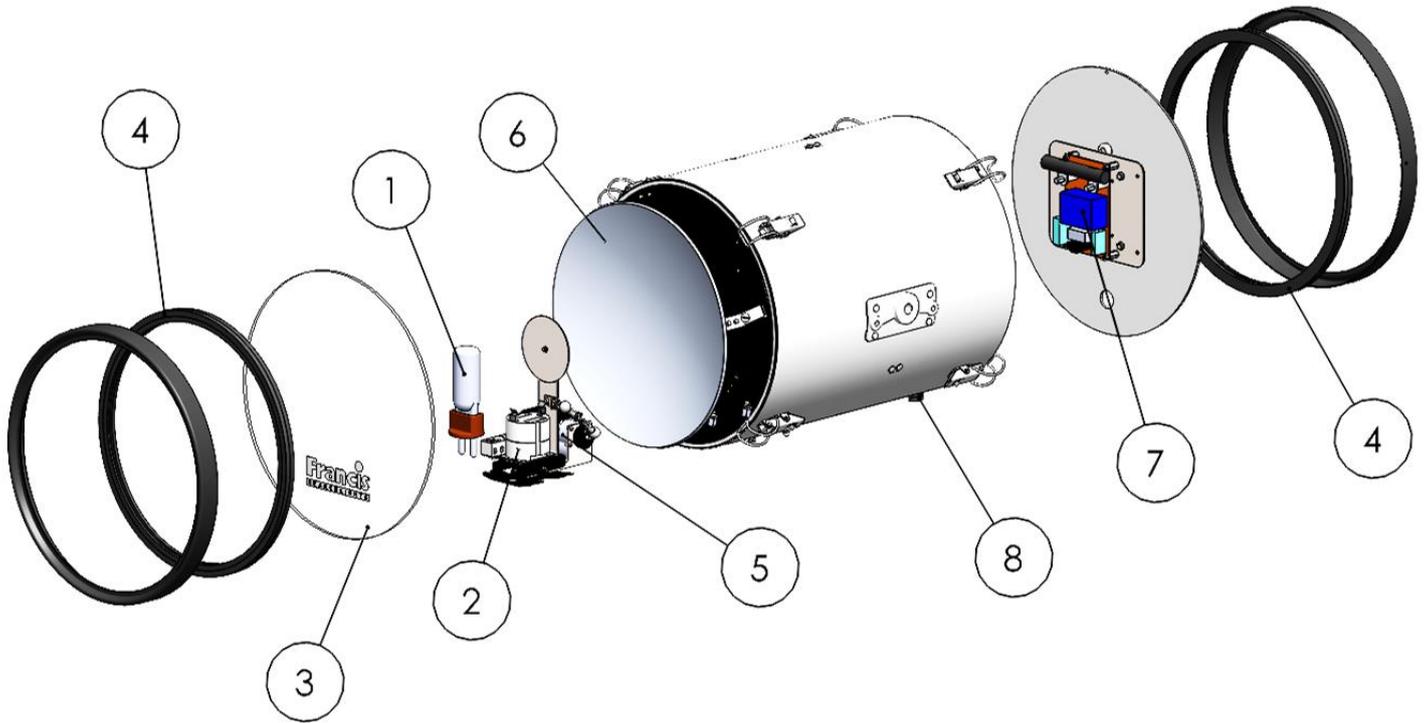

Item Number	Part Number	Description	Quantity
1	D15764	575w Lamp	1
2	C10870-00	Lamp Holder G22	1
3	C08890-00	Front Glass	1
4	C20567-00	Bezel Gasket	2
5	C28025-01	Focus Motor Assembly	1
6	C08884-00	Reflector	1
7	C16880-00	Igniter	1
8	C22268-01	Breather Assembly	1

C29488 Gearbox Assembly

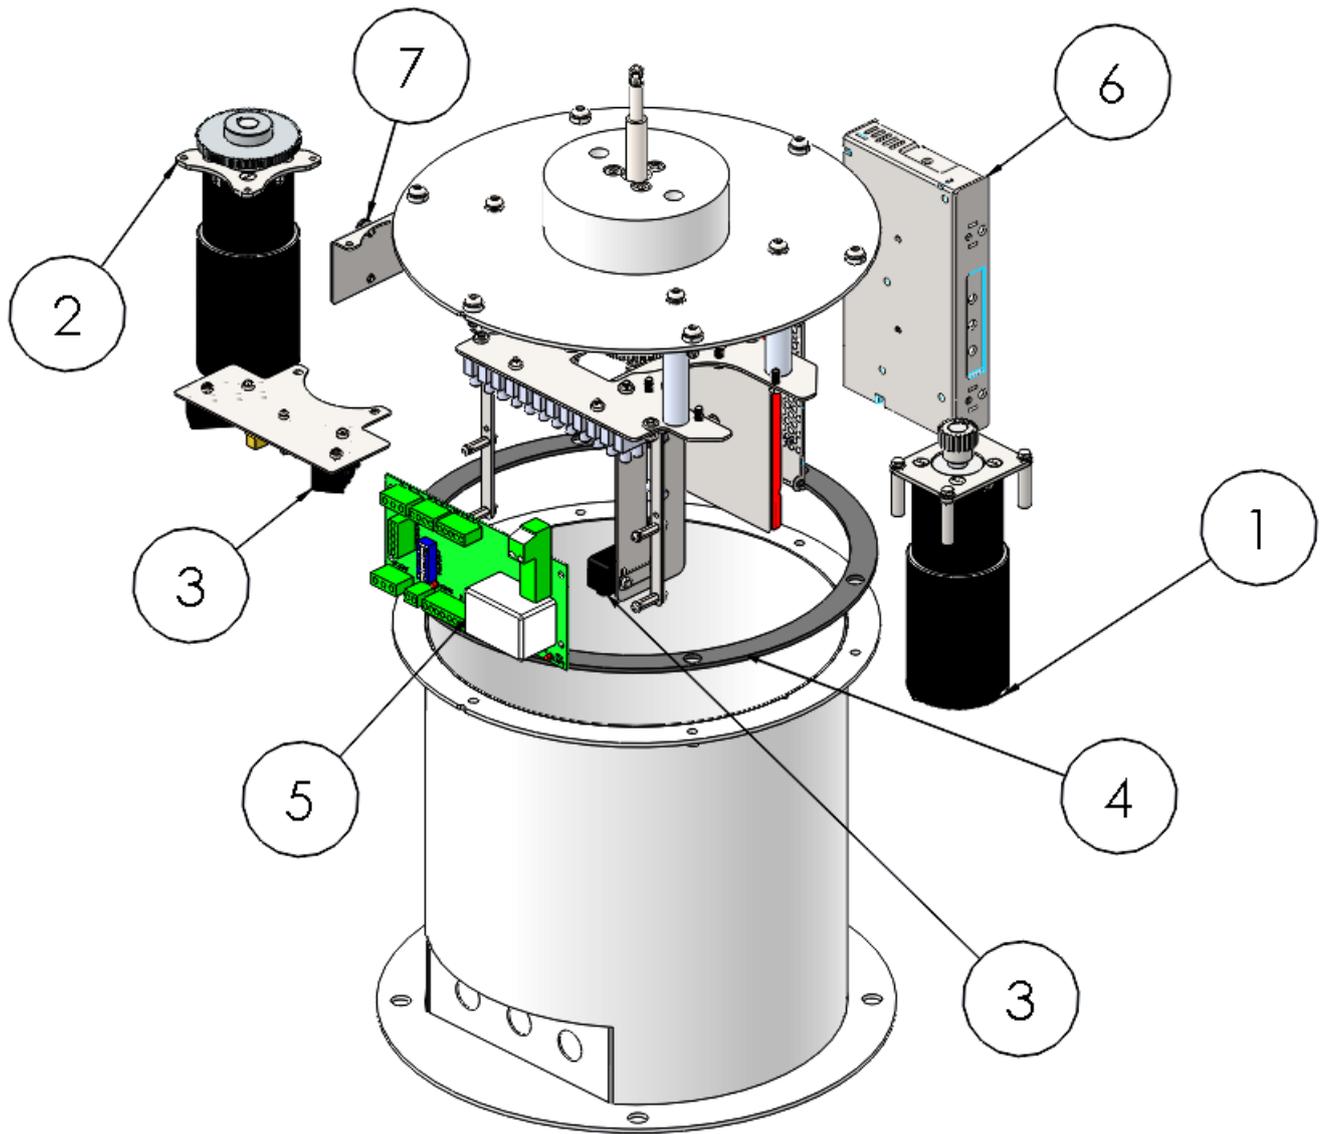

Item Number	Part Number	Description	Quantity
1	C29501-01	Pan Motor Assembly	1
2	C29500-01	Tilt Motor Assembly	1
3	C29275-00	Micro-switch	4
4	C23234-00	Pedestal Sealing Gasket	1
5	C29535-01	Speed Controller PCB	1
6	C29162-00	PSU	1
7	C23277-00	Heater	1

10 - Spare Parts List

The following spare parts can be ordered directly from the manufacturer:

Part Number	Description
--------------------	--------------------

Searchlight Spares

D15764	575w Lamp
C10870-00	Lamp holder G22
C08890-00	Front Glass
C20567-00	Front Glass Gasket
C28025-01	Focus Motor Assembly
C08884-00	Reflector
C16880-00	Igniter
C22268-01	Breather Assembly
C20281-00	Bellows

Control Gear Spares

C20537-00	Ballast
C26986-00	10A MCB

Motor Gearbox Spares

C29501-01	Pan Motor Assembly
C29500-01	Tilt Motor Assembly
C29275-00	Micro switch
C23234-00	Pedestal Sealing Gasket
C29535-01	Speed Controller PCB
C29162-00	PSU
C23277-00	Heater

Joystick Panel Spares

C26537-01	Joystick
C27268-00	Joystick Controller PCB

To prolong the life and performance of your product, we recommend that you only specify Francis Searchlights spare parts. This will ensure that any warranties on your equipment will not be invalidated.

When ordering spare parts please contact the Sales Department at Francis Searchlights Limited sales@francis.co.uk . Please always quote the searchlight model and serial number, which you can find within the front of the barrel head to the right, on the name plate. This will enable a fast response to your spares' requirements.