



## User Instruction & Installation Manual

### FX560 2 Kilowatt Xenon Searchlight



#### Product Reference Number:

A2963 – FX560D 2Kw 240v	A2256 – FX560D 2Kw 115v
A2964 – FX560DP 2Kw 240v	A2258 – FX560DP 2Kw 115v
A2965 – FX560C 2Kw 240v	A2257 – FX560C 2Kw 115v
A2966 – FX560CP 2Kw 240v	A2259 – FX560CP 2Kw 115v

#### *Manufacturer's details:*

Francis Searchlights Ltd  
Union Road, Bolton  
Lancashire, BL2 2HJ, UK  
Tel: +44 (0) 1204 558960  
Fax: +44 (0) 1204 558979  
<http://www.francis.co.uk>  
E-mail: [sales@francis.co.uk](mailto:sales@francis.co.uk)

#### *Distributor details:*

--

Manual Part Number: C23160

Issue: 7 19.3.13

## CONTENTS

- 1 - Introduction
- 2 - Safety Precautions
- 3 - Technical Information
- 4 - Unpacking and Installation Instructions
- 5 - Electrical Installation
- 6 - Operating Instructions
- 7 - Fault Finding
- 8 - Maintenance and Servicing
- 9 - General Assembly & Wiring Diagrams
- 10 - Spare Parts List

# 1 - Introduction

**It is imperative that this manual is read carefully and understood before installing your equipment. For your future reference please keep this manual in a safe place.**

Thank you for specifying a product from the Francis Searchlights range. All Francis products are designed to give complete customer satisfaction and are manufactured to the highest engineering standards in order to ensure optimum performance and service life.

The Francis Xenon range combine features proven over many years service in the most hazardous conditions in both marine and land installations.

In order to prolong the life and performance of your product, we recommend that you only specify Francis Searchlights spare parts. This will also ensure that any warranties on your equipment will not be invalidated. Information on spares ordering and parts is provided in this manual.

Should you ever need to contact Francis Searchlights Ltd. regarding your equipment, please quote the Product Serial Number at all times.

## 2 - Safety Precautions

The following instructions must be adhered to, in order to ensure a safe working environment and the safety of the user.

**Note: When unpacking or manoeuvring the searchlight into its fixing position, suitable lifting points must be used in order to prevent damage to the equipment or personal injury.**

- Because of the high internal pressure within the lamp, there is a risk of explosion in either a hot or cold state;
- During operation this lamp emits intense UV radiation which is harmful to the eyes and skin. Suitable protection should be worn;
- The high luminance of the arc can cause severe damage to the eye if viewed directly. ALWAYS wear suitable protective goggles when viewing the lamp;
- Always use protective jackets supplied with the lamp;
- Should it be necessary to examine the lamp with the front bezel removed, always use a protective shield and wear goggles to ensure a safe working environment;
- Searchlights get hot. Never touch the unit when lit and always allow 15 to 20 minutes for cooling down after turning the searchlight off;
- Never place anything on or cover the searchlight when in use;
- Ensure the lamp has cooled sufficiently before removal;
- If undue force appears necessary to remove the lamp, the equipment should be inspected by a competent person or contact the manufacturer;
- When disposing of lamps there are several options available:
  - Return the lamp, via the supplier, to the lamp manufacturer in its complete packaging
  - Because of the cold internal pressure of the lamp is approximately 8 bar, the lamp must first be depressurized before disposal. Place the lamp, in its protective jacket, in a plastic bag and drop from a height of 1 to 2 metres onto a hard surface;
- XBO lamps do not contain materials which are harmful to the environment and thus are not subject to special waste disposal regulations;
- Due to the vast range of lamps available it may appear possible that more powerful lamps can be used in the equipment than for which it was designed. Even when the unit will physically accept a higher wattage lamp, this substitution is not recommended and is dangerous. This action will also void any warranties on the equipment.
- Always refer to the lamp manufacturer's technical data when dealing with lamps.

### 3 - Technical Information

This product has been designed to operate in accordance with the product specification. The FX560 2000 watt searchlight has the following features:

- All marine grade materials and fixings;
- Electronic power supply unit;
- Parabolic glass reflector;
- Stove enamel painted;
- Full 360° horizontal rotation;
- Vertical movement 45° to -25°;
- Internal self-regulating heater.

The searchlight also performs to the following optical data:

- Xenon light source;
- Lamp Wattage - 2000 Watts;
- Supply voltage – 110/120v or 220/240V;
- Peak Beam Candlepower – 108,084,800 lux;
- Range – 10,396 metres;
- Divergence - 1.5°;
- Temperature range: -50°C;

In order that the searchlight operates correctly it is imperative that competent personnel are responsible for the installation, operation and servicing of this equipment. Failure to adhere to this advice may cause premature failure or incorrect operation of the searchlight, which may damage the equipment or cause personal injury.

Technical information on the Xelamp Power Supply Unit and Irem Ignitor are included overleaf. For more detailed information please contact the manufacturer.

PSU ref:            Model 8502 (Xelamp)  
Ignitor ref:        AS16040A (Irem)

Power Supply fixings centres 440 x 152 using M8 screws.

## Power Supply Details (Model 8502)

### General Description

Output	Power	1400-2200 watts	
	Voltage	22-30 volts D.C.	
	Current	50-85 amperes D.C.	
	Ripple	5% peak-to-peak	
Input maximum	Current	25/22 amperes maximum	40 amperes
	Voltage	208/237 VAC	110/120 VAC
	Phase	Single	
	Frequency	60 Hz (50Hz available)	
Output Adjustments		9 steps	
Size	Width	12" (30.5 cm)	
	Height	15" (38 cm)	
	Length	19" (48.25 cm)	
Weight		145 lbs. (65.9 Kg)	
Cooling		Convection	

### **Warning**

When this appears in this text, it indicates a hazard to personnel.

### **Caution**

When this appears in this text, it indicates a procedure which can result in equipment damage if not properly accomplished.

### Receiving the Power supply

The units are shipped with the power supply bolted to a shipping skid and enclosed in a heavy cardboard cover held in place by banding. Physical damage to the container or its contents should be reported to the carrier immediately.

### Unpacking

Cut the banding strips and lift the cardboard cover off of the unit. Remove the four bolts holding the power supply to the skid. Place the unit in the location selected for installation.

### Locating the power supply

The power supply is convection cooled and the location selected should provide a minimum of 6" clearance around the case. The area should have free movement of air to dissipate the heat generated by operation of the power supply. Provide a space large enough to allow service of the unit if required.

### **Caution**

**Do not allow anything to be placed upon the power supply case; the perforated top is for ventilation and must not be obstructed.**

Try to select a location as close to the lamphouse as practical. Many users install the power supply adjacent to the searchlight where space is available and local codes permit.

### **Electrical installation and connection**

### **Caution**

**Much future grief can be avoided by having a competent electrical contractor install and connect this unit.**

### **Caution**

**We make suggestions in this manual as to minimum wire sizes to be used. Refer to, and conform to the codes applicable in your area.**

### **Caution**

**Observe polarity of the conductors which carry the D.C. output of the power supply to the lamphouse. Reversed polarity will immediately destroy the xenon bulb upon application of power.**

### **Warning**

**When the electrical installation is complete there are two sources of primary power within the unit. Turn off all power when adjusting or servicing the power supply.**

### **Warning**

**This unit can run warm to very hot. Allow at least 15 minutes after turning off the power for the unit and its components to cool down before attempting any service procedures.**

Holes are provided in the end section of the power supply case for conduit entries. Install conduit in a manner which allows some movement for service if required. Refer to drawings for connection information.

Model 8502      Primary line: (240v) #10 gauge minimum (110v) #8 gauge minimum; 30 ampere breaker or fuse (240v) 40 ampere breaker or fuse (110v).  
D.C. output: #4 gauge minimum.

### **Warning**

**The power supplies have two sources of power. Disconnect (turn off) primary power before making adjustments or service procedures.**

#### **Output power adjustment**

### **Warning**

**The power supply stores energy after primary power is switched off. Wait a minimum of two minutes for the capacitor charge to bleed off.**

Taps are provided on TB1 to alter the output of the power supply. Small current changes may be made by moving the tap from H to M to L. Highest current is on H; the lowest is on L. Larger current changes may be made by moving the tap from 4 to 5 to 6. Highest current is on 4; the lowest is on 6. One input line must be on H, M or L. The second line must be on 4, 5 or 6. When the primary line is high (120/240 VAC), tap 5 or 6 should be used. For 110/208 VAC use any tap, 4, 5 or 6. When changing taps, do not insert wire into the connector so far as to clamp on the insulation rather than the bare wire. Be sure to tighten the connector screws.

#### **Routine maintenance**

### **Warning**

**The power supply has two sources of power. Turn off power before servicing the unit.**

### **Warning**

**This unit can run warm to very hot. Allow at least 15 minutes after turning off the power for the unit and its components to cool down before attempting any service procedures.**

At 6 month intervals, clean dust out of the unit. Inspect all electrical connections. Look for discoloration due to overheating. Be sure all components are clean and tight.

#### **Troubleshooting**

Much data can be obtained from the volt-ammeter built into the lamphouse control panel. In addition, the following instruments will be needed to perform all trouble-shooting operations that can be done in the field:

Portable volt-Ohm-ammeter (VOM) – must be capable of supplying current to forward bias a silicon diode on R X 1 range. (Some digital instruments cannot; consult operator's manual for instrument concerned.)

Clamp-on A.C. ammeter capable of ¼ ampere or better resolution.



Xenon lamp power supplies have two stages of operation:

- 1) Before igniting the bulb – At this time, the voltage at the power supply output terminals reaches “open circuit” value (110 VDC or greater).
- 2) After igniting the bulb – At this time, the voltage at the power supply output is determined by the load placed on the power supply by the xenon lamp (18-30 VDC).

Power supply difficulties can be separated into one of three areas for purposes of diagnosis and repair:

- A) Power line problems.
- B) Boost circuit (Open circuit voltage) problems.
- C) Main power supply problems.

A) Primary power problems

Power to the power supply is supplied from the sub-panel. The PSU power contactor, K1, will operate when the lamphouse is switched on in the absence of primary power to K1. If there is D.C. voltage out of the power supply as indicated on the lamphouse voltmeter you have primary power. If there is no lamphouse voltmeter, use your VOM. If there is no DC. Output voltage and K1 operates, check the primary line with a VOM to locate the point of failure.

B) Boost circuit problems (open circuit voltage)

Loss of the open circuit voltage due to boost circuit problems will result in the following:  
Ignitor will not fire in the AUTO mode.  
Bulb will not light.

Disable the lamphouse ignitor by removing primary power to the ignitor. Connect your VOM to the power supply D.C. output. Observe polarity. Turn on the power supply. If you read 110 VDC or more, the boost circuit is operating. If the D.C. voltage is low, on the order of 50 volts, it is likely that diodes 5 and/or 6 have failed. Current limiting resistor R1 may be open.

C) Main power supply

Power supply bank D1-D4

A shorted diode will cause the primary current to go high and will trip the circuit breaker in the sub-panel. An open diode will cause the projected picture to have a pronounced flicker and may result in somewhat lower operating current.

Capacitors C1-C2-C3

A shorted capacitor or capacitors will raise the primary current and trip the circuit breaker in the sub-panel.

C1-C2-C3

If these are open or have lost capacity (ability to store energy) they will cause either a noticeable flicker in the projected picture or ignition problems or both. If in doubt, disconnect the capacitors one at a time. After disconnecting a capacitor, if no change in ignition or flicker is observed, then the capacitor is having no effect. Replace it.

Low capacity or an open capacitor affect ignition because there is insufficient surge current to reliably light the bulb. If disconnecting a capacitor does change either flicker or ignition, then the capacitor is functioning. Reconnect it. High ripple current caused by a diode failure will

result in overheating of R3. You may use a clamp-on A.C. ammeter on the common D.C. line to the capacitor bank as an indirect method of checking ripple. The 8502 capacitor bank will have a nominal 25 ampere (AC) current flow. Higher current indicates a high ripple condition. Lower currents, may indicate open or deteriorated capacitors.

Current into the capacitor bank varies with adjustment of the power output. As the output power is decreased, current flow of the capacitor bank will decrease.

### **Diode testing and replacement**

To test a diode it must be disconnected from the circuit in which it is used. In many failure modes, the diode failure can be tentatively identified by discoloration of the bright surface because of excessive heat. You will still have to disconnect the diode and make further checks to verify failure. After disconnecting the diode, sue your VOM on the R x 1 scale. With the meter leads connected in one direction, the reading should be zero or close to it; reversing the meter leads, the indication should be a very high resistance. If the diodes does not exhibit these characteristics, replace it. If you have removed a diode from its heatsink or you are installing a new diode, observe the following instructions: Clean the area of the heaksink in which the diode is to be installed.

### **Warning**

**You must use heatsink compound. It is caustic in nature. Do not use for fingers; keep it away from your eyes; and do not ingest. Follow instructions on the container in which the compound is packaged.**

You may obtain heatsink compound at your local electronics dealer. Apply the compound with a wood or plastic spatula; a Popsicle stick will work well. A thin layer of compound is adequate. Use internal star washers as opposed to split washers. When tightening the diodes in the model 8502 power supply, the torque should be 90 in lbs., 125 in lbs. In replacing diodes, observe polarity. Model 8502 – diodes 1-3 are 1N3291R types, diodes 2-4 are 1N3291S types.

## AS series

### Introduction


These igniters are expressly designed to strike Xenon, Xenon-Mercury, Mercury, Metal Halide and similar arc lamps. They produce the high voltage, high frequency starting potential required to get the gas in the lamp to ionize and make the current flow possible.

The **AS** igniters meet the lamp manufacturers' recommendations to ensure immediate and correct ignition of the lamp when cold or in any cooling stage.

They should be installed close to the lamp (but thermally shielded from it); the high voltage lead must be as short as possible and carefully insulated to prevent corona loss and reduction of strike energy. The ambient temperature must not exceed 60°C.


Some models are equipped with a built-in special function relay allowing automatically cycled or timed ignition. Also this relay prevents the igniter from striking when the lamp is ON or if the no-load voltage to the lamp is not correct. As far as the insulation class, this device can be considered Cl. II (as per IEC 536), but it must be grounded for interference suppression.

### Block diagram

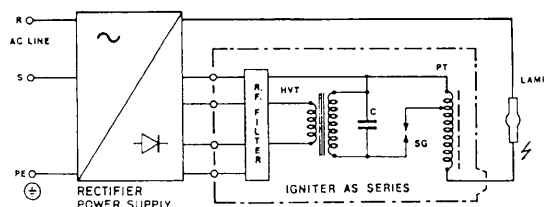


### Outline drawing


AS-3040



AS-8030

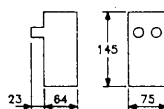

AS-16040/A

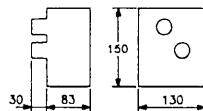

AS Series range

Models	AC input (50-60Hz)		H.V. output KV	Lamp current A	Weight Kg.
	Volt	A during ignition			
<b>AS-3040</b>	230V	0.8	40	30	1.3
<b>AS-8030</b>	±10%	1.5	30	80	1.5
<b>AS-16040A</b>		3.8	40	160	3.5

The suffix 'A', used for the model AS-16040A, means that it has a built-in relay system for automatic or short timed ignition.

## 4 - Unpacking and Installation Instructions

The following instructions should be read and fully understood prior to installing the equipment to ensure that the correct procedures are followed, and all safety precautions are observed.

**Note: If the equipment has been in storage for a considerable amount of time, it is advisable to conduct a routine maintenance check on all parts before installation.**

### **Safety Precautions**

This equipment should not be connected to an electrical supply before being installed. Installation procedures should be adhered to in order to ensure a safe working environment and reduce the risk of damage or personal injury.

### **Preparing the Mounting Position**

Mark out and drill the fixing holes through the deck. Fit the 'O' ring in position and bolt the searchlight base securely. On an uneven surface it is necessary to use a suitable sealant, such as silicone in order to ensure a weatherproofed joint. If anti-vibration mounts are to be fitted, the fixing holes for the mounts should also be marked out and drilled. Prior to manoeuvring the searchlight into its' fixing position, the AV mounts should be fitted to the base. When in the desired position, bolt the searchlight firmly down.

## 5 - Electrical Installation

For safety purposes, only competent personnel should perform the electrical installation. All equipment should be installed to current Electrical Regulations and Standards.

In order to obtain the maximum light output from the searchlight, it is essential that the full operating voltage of the lamp fitted be applied to the lampholder contacts.

### Method of Electrical Connection

- 1) Disconnect the supply before working on the electrical system;
- 2) The searchlight must be connected to a fused electrical supply, using suitably sized cable;
- 3) If the searchlight is located a considerable distance from the supply, provision must be made in the cable size in order to overcome the voltage drop. The following table should be used for indication purposes only:

**The PSU should NOT be positioned no more than 5 meters away from the Searchlight.**

The following table below indicates the maximum length of cable to be used for the AC supply cable, from the control panel to the searchlight:

Searchlight	115v 2Kw	240v 2Kw
Cable Size (mm <sup>2</sup> )	Distance Max	Distance Max
1.5	8 MTRS	37 MTRS
2.5	14 MTRS	60 MTRS
4	22 MTRS	96 MTRS
6	34 MTRS	150 MTRS
10	57 MTRS	250 MTRS

- 4) Whenever possible cable terminations should be made below deck and with approved terminal devices;
- 5) If a spare auxiliary fuse or circuit breaker is not available, one of the correct type and rating should be fitted and connected to a positive supply. It is advisable to locate a bus bar or main connection and avoid any direct connection to the supply;
- 6) For 110/220v AC products, the following colour coding system should be used for the customer supply cable:

Brown	- Live
Blue	- Negative
Green/Yellow	- Earth

**Note: This equipment must be earthed.**

- 7) For ease of use, a single pole switch, of the appropriate rating should be fitted in a convenient location. All cable lengths should be kept to a minimum.

## **Installation Guidelines**

A typical installation and connection routine for the searchlight is as follows:

Referring to wiring diagram C23114, a supply is fed to the PSU, which then provides a common feed to all other functions and equipment.

Cables required to be connected by the customer: -

4 cores 6mm cable from the Searchlight to the PSU, doubling up the pairs,

3 cores 2.5mm cable from the Searchlight to the PSU.

3 cores 1.5mm cable from the Searchlight to the Heater switch. (Customer may need to provide a suitable junction box to extend these three cables – 3 metres supplied).

The searchlight head is pre-wired along with the connecting cable to the motor gearbox.

## **Basic Operation**


When the searchlight is switched on a supply is fed to the PSU and linked to the ignitor. Also, from the PSU, a dc output is fed to the lamp.

The ignitor ionises the gas within the lamp and this strikes the light.

## **Fitting instructions for the 2Kw xenon lamp**

Referring to the diagram overleaf:

- 1) Unfasten the ten latches (A) on the front and rear of the searchlight;
- 2) Remove the front bezel (B) and rear bezel (C) assemblies;
- 3) Unscrew the two M6 hexagon screws (D) from the front lampholder mounting block (E) and remove the front lampholder assembly from the mounting bracket;
- 4) Loosen the knurled screw on the front (F) and rear (G) lampholder assemblies;
- 5) The lamp can now be inserted, make sure that the negative (cathode) end of the lamp is towards the rear of the searchlight;
- 6) Tighten the knurled screw (G) on the rear lampholder assembly to hold the lamp in position;
- 7) Fasten the front lampholder mounting block back in position, it will be necessary to pull the front socket against its spring to fit over the lamp. When in place tighten the front knurled screw (F);
- 8) Fasten the front and rear lampholder leads as wiring diagram, ensuring the connections are secure;
- 9) The front bezel and rear bezel can now be replaced.
- 10) Removal is the reverse of the above.

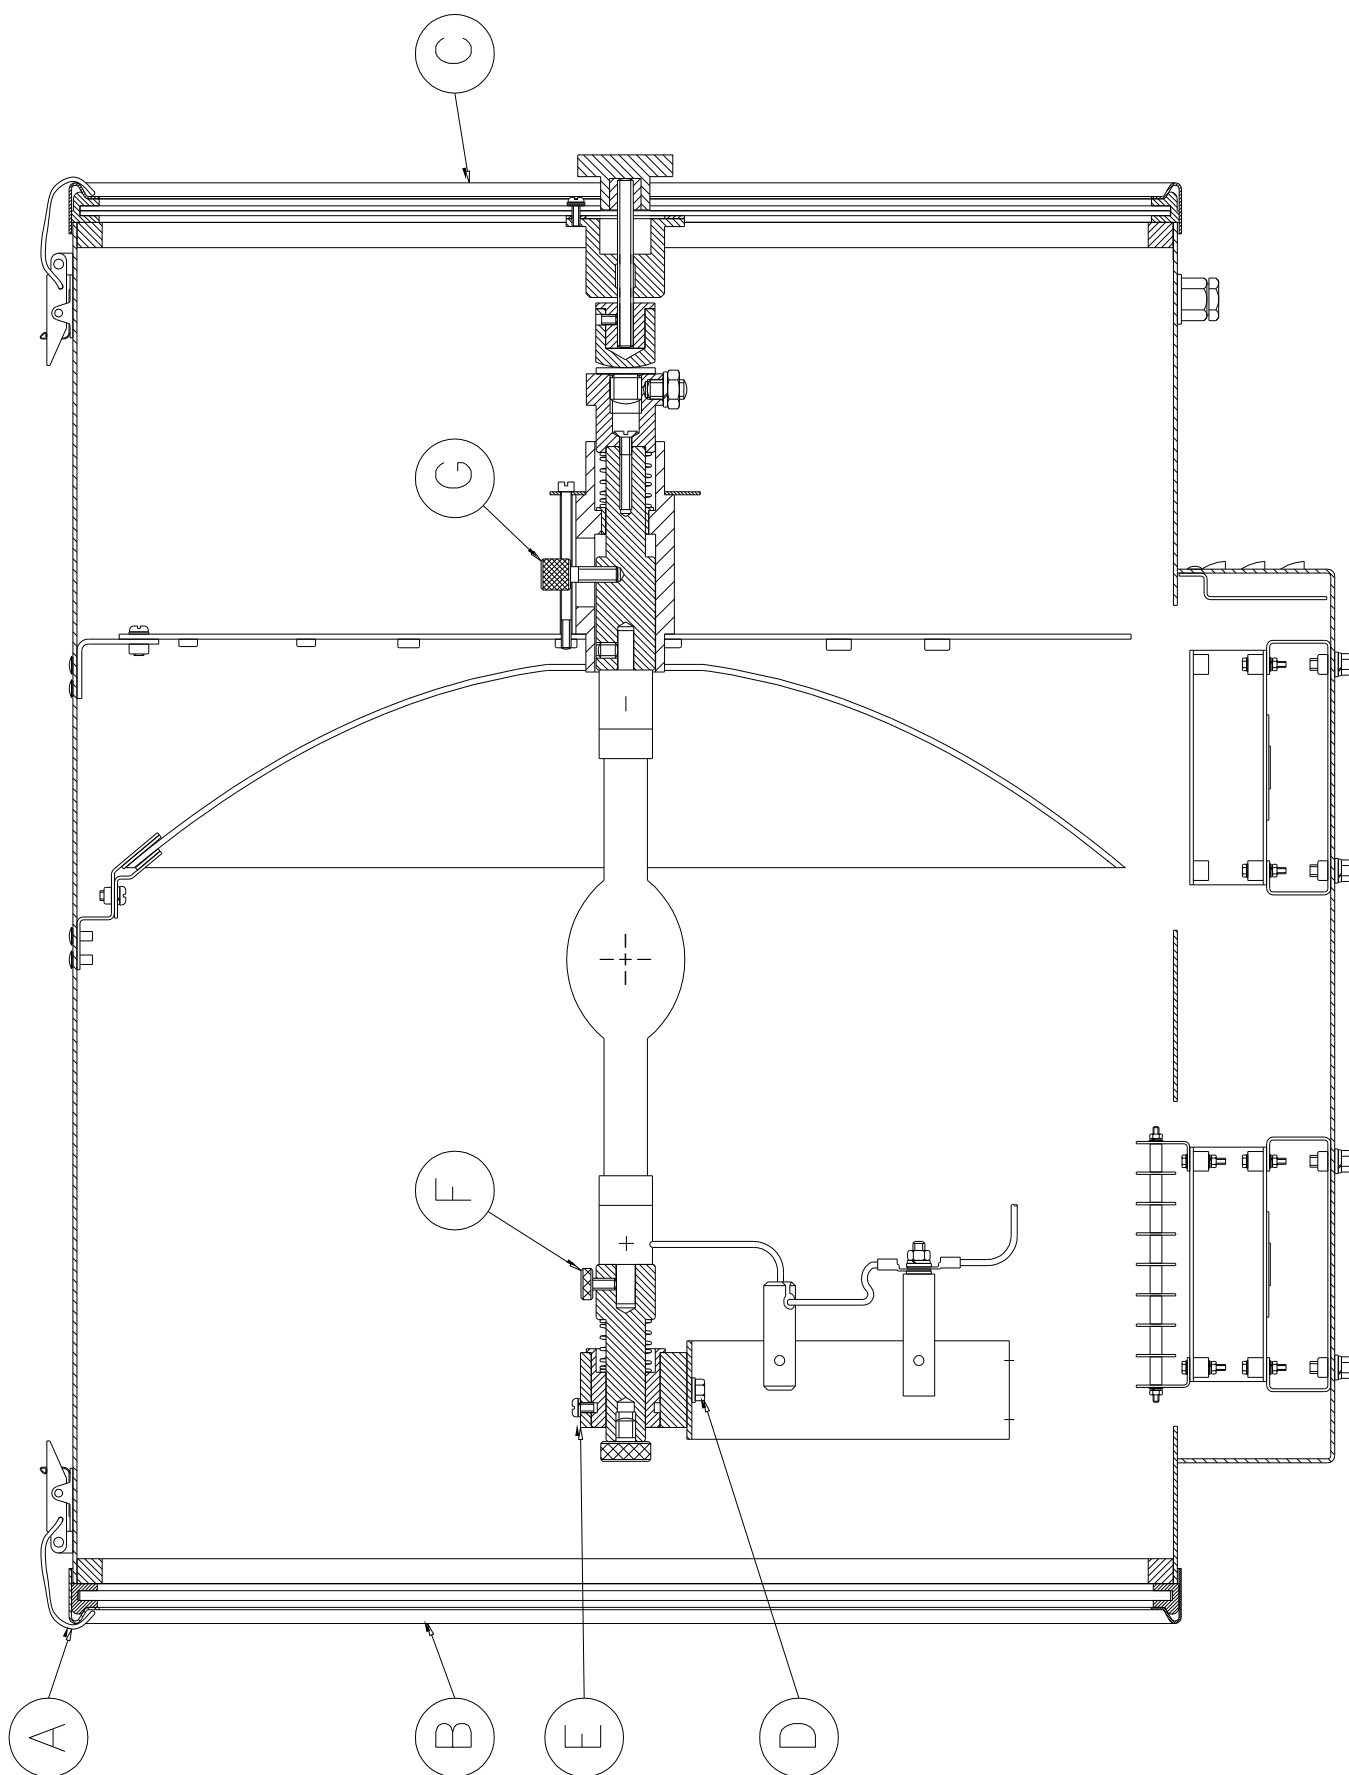

[Back To Top](#)



## 6 - Operating Instructions

This equipment is designed for use out of doors, in free air. Never place anything on, or cover, the searchlight when in use as this may present a hazard.

The PSU should be housed below deck/in doors. Never leave the PSU exposed to weather conditions.

The searchlight can be positioned using the elevation and base lockwheels. When in the desired position the lockwheels must be securely fastened to prevent damage.

The beam of the searchlight can be adjusted to give a variety of beam types. By turning the focus lockwheel positioned on the rear dome clockwise/anti-clockwise the lampholder mechanism moves through spot to flood positions. When in the desired beam is achieved simply release the lockwheel.

The heaters specified on this equipment are self-regulating and will shut off when they reach the dew point temperature.

**This product should not be used for any purpose other than for which it was designed. Any modifications to the product should not be undertaken without consulting the manufacturer.**

## Setting to Work

Safe service in use necessitates the strict observance of the following precautions.

- Any article fabricated from quartz or glass is inherently fragile and care should therefore be taken, at all times, when handling lamps;
- Eye protection must be worn when handling lamps that have been removed from their packaging materials. The protective jacket should not be removed from the lamp for safety reasons, as there is a remote possibility of the lamp shattering violently, especially if it is subjected to mechanical shock or vibration;
- Ensure that the power rating of the Xenon lamp to be fitted is suitable for the lamphouse and power supply equipment (rectifier);
- Always isolate the equipment from the supply before inserting a lamp;
- Before inserting the lamp ensure that all contacts are clean. Contacts must be renewed at the slightest sign of corrosion. Sanding or filing down corroded areas is not recommended as this will only make the conducting surface between the pin and lampholder smaller, thus causing the lamp to overheat;
- The inert gas (Xenon) used in XBO lamps is under a pressure of several bar even when the bulb is cold. FOR SAFETY REASONS THE LAMP MAY ONLY BE INSERTED INTO THE LAMPHOUSE WITH THE PROTECTIVE JACKET FITTED;
- Do not twist or bend the fused quartz bulb when fitting the lamp as mechanical stresses MUST be avoided;
- Ensure that the spring contacts firmly surround the pins on the cap of the lamp. Do not apply unnecessary force when tightening the screws;
- After inserting the lamp, ensure that there is sufficient axial play in the lampholder. The lamp must be capable of unimpeded expansion when it warms up to operating temperature. Mechanical forces must not be applied to the fused quartz bulb;
- Electrical leads must be arranged in such a way that there is a sufficient air gap (approximately 40mm) between them and the lamphouse, in order to prevent flashovers from the ignition voltage. All flexible leads must have strain-relieving clamps;
- Before putting the lamp into service for the first time, check the polarity of the electrical connections. INCORRECT POLARITY WILL CAUSE IMMEDIATE DESTRUCTION OF THE LAMP;
- Before the protective jacket is removed, suitable protection must be worn i.e face mask and gloves with wrist protection;
- Never touch the quartz bulb with bare hands, as fingerprints will make the glass cloudy and cause a severe loss of light. This may also cause recrystallisation and thus weaken the bulb material. Should the bulb be inadvertently touched, remove fingerprints with methylated spirit and a clean, soft paper towel. The bulb should then be wiped with distilled water. NOTE: ALWAYS WEAR MASK AND GLOVES DURING CLEANING);
- All packaging and the protective jacket must be retained for re-use. Whenever removing a lamp, the protective jacket must always be used for safety reasons;

**Notes:**

- 1) XBO lamps are designed for dc operation only. The dc current may only be varied within the limits of the current control range. An XBO lamp operates best at rated current; over the life of the lamp, the current may be increased to its maximum value to compensate for loss of light. The output of the lamp can be reduced by operating the lamp at minimum current, but this does not prolong the life of the lamp;
- 2) For safety reasons, XBO lamps should be replaced once they reach the end of their average lamp life, and not later than 1.25 times their average lamp life. After this time there is an increased risk of the lamp exploding;
- 3) The anode (positive cap marked '+') must be on top when the lamp is inserted in the vertical position. If the anode is incorrectly inserted the arc will be unstable, the bulb will blacken more quickly, and the lamp will prematurely fail;
- 4) The HT lead from the high voltage terminal of the ignitor, must be connected to the cathode (negative cap marked '-'). If the lamp is connected with the wrong polarity it will be irreparably damaged after a very short time.
- 5) In all circumstances the lamp manufacturer's data should be referred to when dealing with lamps.

## 7- Fault Finding

All fault finding must be conducted by a competent person or qualified Electrical Engineer.

Please refer to the following table for the trouble-shooting of Xenon lamps.

Fault	Cause	Remedy
<ul style="list-style-type: none"><li>■ Wrong Polarity</li></ul>	<ul style="list-style-type: none"><li>■ Lamp incorrectly fitted</li><li>■ Faulty wiring</li></ul>	<ul style="list-style-type: none"><li>■ Anode (large electrode) must always be on top in vertical burning position</li><li>■ Check polarity, transpose connections if necessary</li></ul>
<ul style="list-style-type: none"><li>■ Cap overheated</li><li>■ Cap temperature above 230°C</li></ul>	<ul style="list-style-type: none"><li>■ Faulty contacts</li><li>■ Cooling equipment defective</li></ul>	<ul style="list-style-type: none"><li>■ Check terminals, tighten or renew</li><li>■ Check cooling equipment and replace if necessary</li></ul>
<ul style="list-style-type: none"><li>■ Arc unsteady</li></ul>	<ul style="list-style-type: none"><li>■ Lamp operated outside current control range</li><li>■ Magnetic stabilisation for horizontal operation defective</li></ul>	<ul style="list-style-type: none"><li>■ Correct current setting</li><li>■ Check magnetic stabilisation</li></ul>
<ul style="list-style-type: none"><li>■ Bulb draws in air</li></ul>	<ul style="list-style-type: none"><li>■ Crack in graded seal caused by overheated cap</li><li>■ Maximum cap temperature 230°C</li></ul>	<ul style="list-style-type: none"><li>■ Check terminals - tighten or renew</li></ul>
<ul style="list-style-type: none"><li>■ Glass erosion on fused quartz bulb</li></ul>	<ul style="list-style-type: none"><li>■ Lamp operated outside current control range</li><li>■ Lamp service life exceeded</li></ul>	<ul style="list-style-type: none"><li>■ Correct current setting</li><li>■ Check meter</li></ul>
<ul style="list-style-type: none"><li>■ Electrodes damaged</li><li>■ Premature blackening</li></ul>	<ul style="list-style-type: none"><li>■ Current ripple too high</li><li>■ Auxiliary mirror incorrectly adjusted</li></ul>	<ul style="list-style-type: none"><li>■ Have power supply inspected</li><li>■ Adjust auxiliary mirror</li></ul>
<ul style="list-style-type: none"><li>■ Asymmetrical blackening of lamp (in horizontal burning position)</li></ul>	<ul style="list-style-type: none"><li>■ Lamp operated too long in same position</li></ul>	<ul style="list-style-type: none"><li>■ Turn lamp through 180° after half service life</li></ul>

## **Failure of Lamp to Ignite**

In the event of the xenon lamp failing to light the following steps should be taken:

- 1) Check that the mains supply is connected to the input of the PSU. On operating the switch, if the lamp does not light, switch off mains supply and check all fuses;
- 2) On pressing remote starting switch the lamp still does not ignite, check the searchlight head. On your command get an operator to activate the starting switch for approximately 10 seconds. During this time listen for any noise (cracking or hissing) coming from within the barrel. If this arcing is heard switch off the supply at the mains. Remove the rear bezel to expose the two supply leads to the xenon lamp. Using a dry cloth wipe these leads to remove any dust, moisture or condensation that may have formed around the inside of the barrel. Replace the rear bezel, ensuring the latches are securely fastened, and perform the check again, listening for the cracking. If the lamp still fails to ignite, switch off at the mains and replace the xenon lamp in accordance with the safety procedures within this manual and the manufacturer's information.

**Any further tests to be carried out with regards to lamp failure must be conducted by a competent electrical engineer and should not be carried out in an explosive atmosphere.**

- 3) Before a xenon lamp will ignite, the electrically insulated gas between the electrodes must be ionised. This is done by the ignitor which produces a high frequency voltage (up to 30,000 volts or higher). The ignitor is activated by switching the lamp on and a crackling or hissing noise should be heard. The ignitor is housed within the rear of the searchlight barrel. This is a totally encapsulated unit and repair is not advised. If found to be faulty a new ignitor must be fitted.

## 8 - Maintenance and Servicing


In order to prolong the service life and performance of your searchlight, the following maintenance guidelines are recommended:

- Maintenance checks should be conducted before every voyage or at least every three months;
- Before checking, disconnect the equipment from the supply;
- Visually inspect the condition of the equipment;
- Any major or minor structural damage should be rectified immediately in order to reduce sympathetic wear;
- After inspection it may be necessary to clean the inside of the searchlight. The following procedure should be adhered to:
  - Remove the front bezel;
  - Clean the front glass inside and out using a proprietary glass cleaner;
  - Clean the reflector if required;
  - Check the reflector mounting gaskets. If signs of corrosion or damage are evident, replace as necessary;
  - Ensure that the lampholder is free from corrosion or other damage;
  - Check earth point for conductivity;
- It is advisable to check all seals and gaskets for signs of degradation. Renew if necessary;
- Upon completing all maintenance requirements, the searchlight should be tested for full working order (approximately 20 minutes).
- Every six months the external movement mechanism i.e. lockwheels, elevation & pan mechanism should be lightly lubricated.

**If in any doubt as to the correct servicing procedures to adopt please contact your distributor/agent or the manufacturer who will be able to advise the best course of action for your product.**

## 9 – General Assembly & Wiring Diagrams

Drawing Number	Description
A2963/A2256	FX560D 2Kw G.A.
A2964/A2258	FX560DP 2Kw G.A.
A2965/A2257	FX560C 2Kw G.A.
A2966/A2259	FX560CP 2Kw G.A.
C23114	240V 2Kw Xenon Wiring Diagram
C24495	115V 2Kw Xenon Wiring Diagram
	PSU Schematic
	PSU Control Wiring

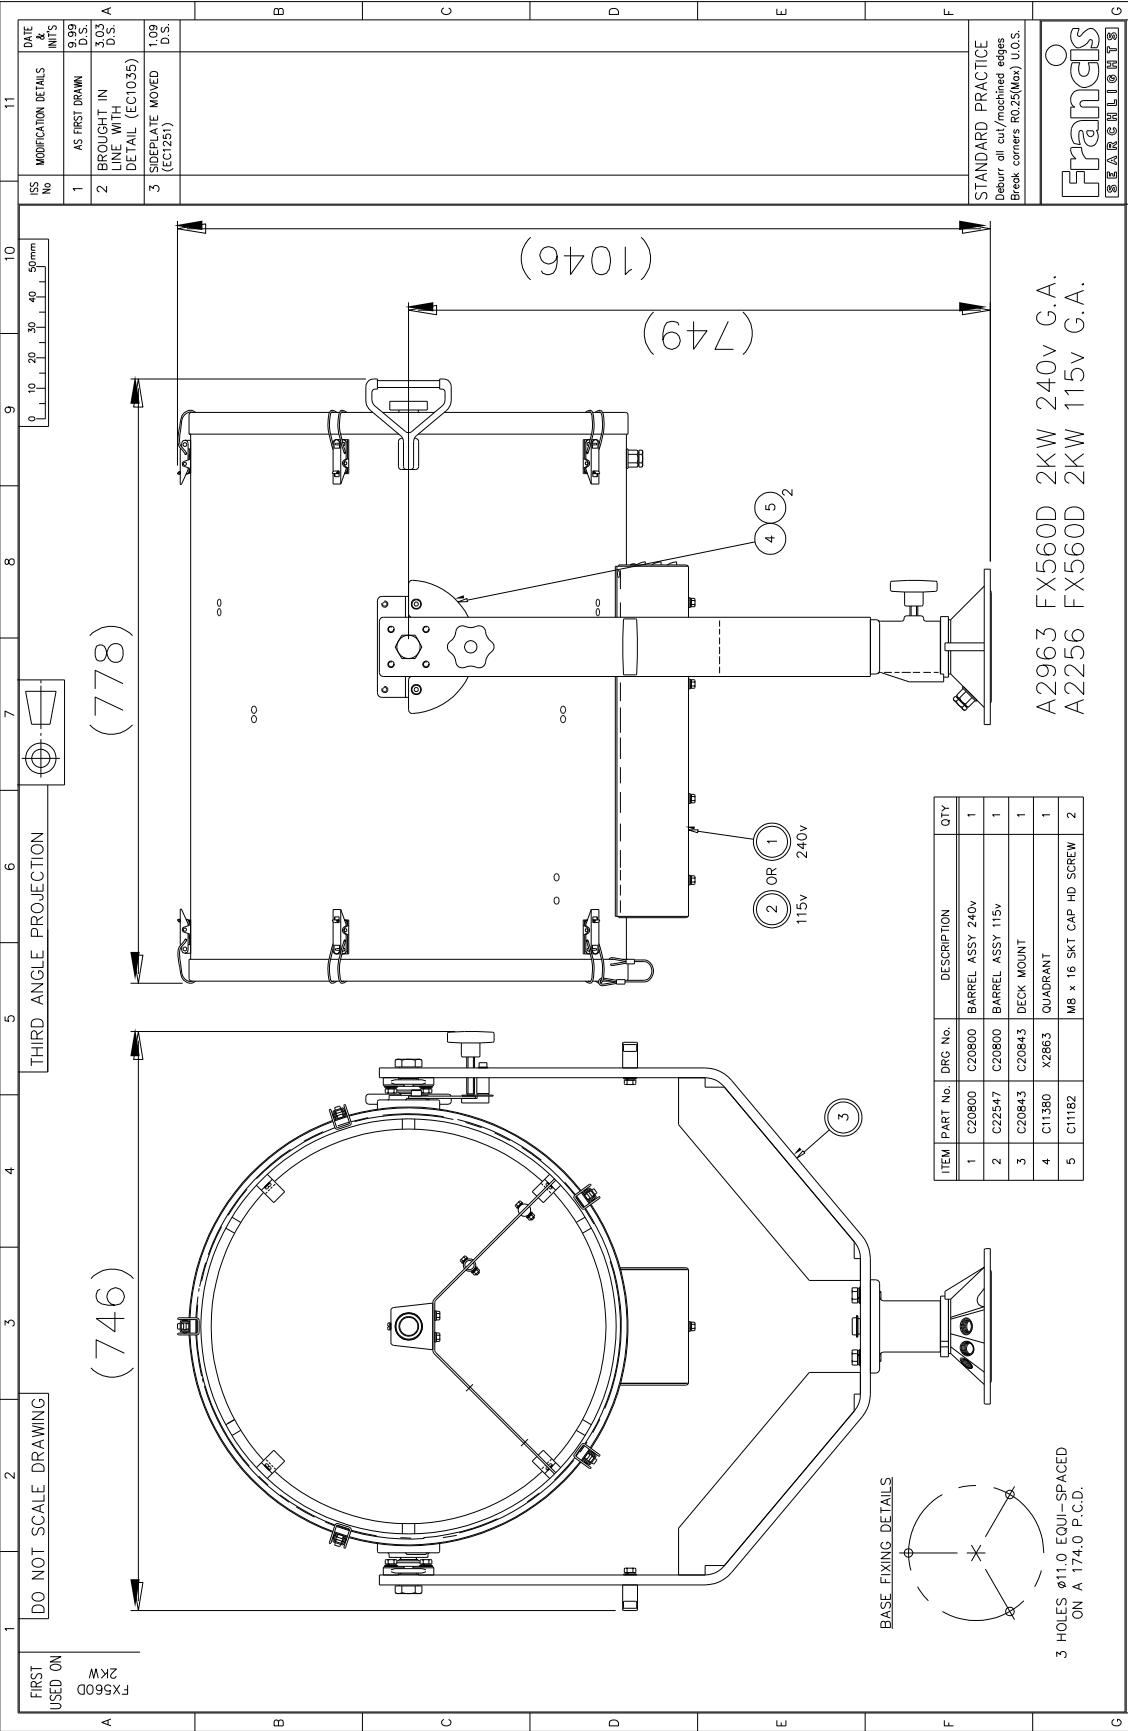

ISS No	DATE	MODIFICATION DETAILS
1	AS FIRST DRAWN	
2	BROUGHT IN LINE WITH DETAIL (EC1035)	
3	SIDEPLATE MOVED (EC1251)	

STANDARD PRACTICE  
Deburr all cut/machined edges  
Break corners R0.25(Max) U.O.S.



FRANCIS SEARCHLIGHTS LIMITED . UNION ROAD . BOLTON . BL2 2HU	© 1999	A2	CONT ON SHEET
Part No / DRG No	FX560D 2KW G.A.	1	A2963
DESCRIPTION	FX560D 2KW G.A.		
FINISH			
MATERIAL			
Scale Casting: To ISO 8062 C110			
Die Casting: To ISO 8062 C18			
Hole centres & posns: ±			
General: ±			
Angular: ±			



**DO NOT SCALE DRAWING**

FIRST USED NO. 2KW FX560DP

**THIRD ANGLE PROJECTION**

(2007)

(778)

(1710)

(746)

A2964 FX560DP 2KW 240v G.A.  
A2258 FX560DP 2KW 115v G.A.

BASE FIXING DETAILS

4 HOLES Ø12.5 EQUI-SPACED  
ON A 270.0 P.C.D.

ITEM	PART No.	DRG No.	DESCRIPTION	QTY
1	C20800	C20800	BARREL ASSY 240v	1
2	C22547	C20800	BARREL ASSY 115v	1
3	C20848	C20848	DECK PEDESTAL MOUNT	1
4	C11380	X2863	QUADRANT	1
5	C11182		M8 × 16 CAP HD SCREW	2

**MODIFICATION DETAILS**

REV. NO.	DATE	BY	REMARKS
1	AS FIRST DRAWN	SLO	J.S.
2	BROUGHT IN-	SLO	J.S.
3	LINE WITH DETAIL (C1035)	SLO	J.S.
4	CHANGE WORKED (C1035)	SLO	J.S.

**STANDARD PRACTICE**  
Drawn at full/machine edges  
Break corner 10.25(Min) U.C.S.


**Francis SEARCHLIGHTS LIMITED**


DRAWN: D.S. DATE: 9.99 TOLERANCES: ±  
CHECKED: SCALE: 1:5 General: ±  
ALL DIMENSIONS IN MILLIMETRES Applied: ±

FRANCIS SEARCHLIGHTS LIMITED . UNION ROAD . BOLTON . BL2 2HU

PART No./DRG No.: © 1999 A1 CONT ON SHEET

SHT: A2964.1

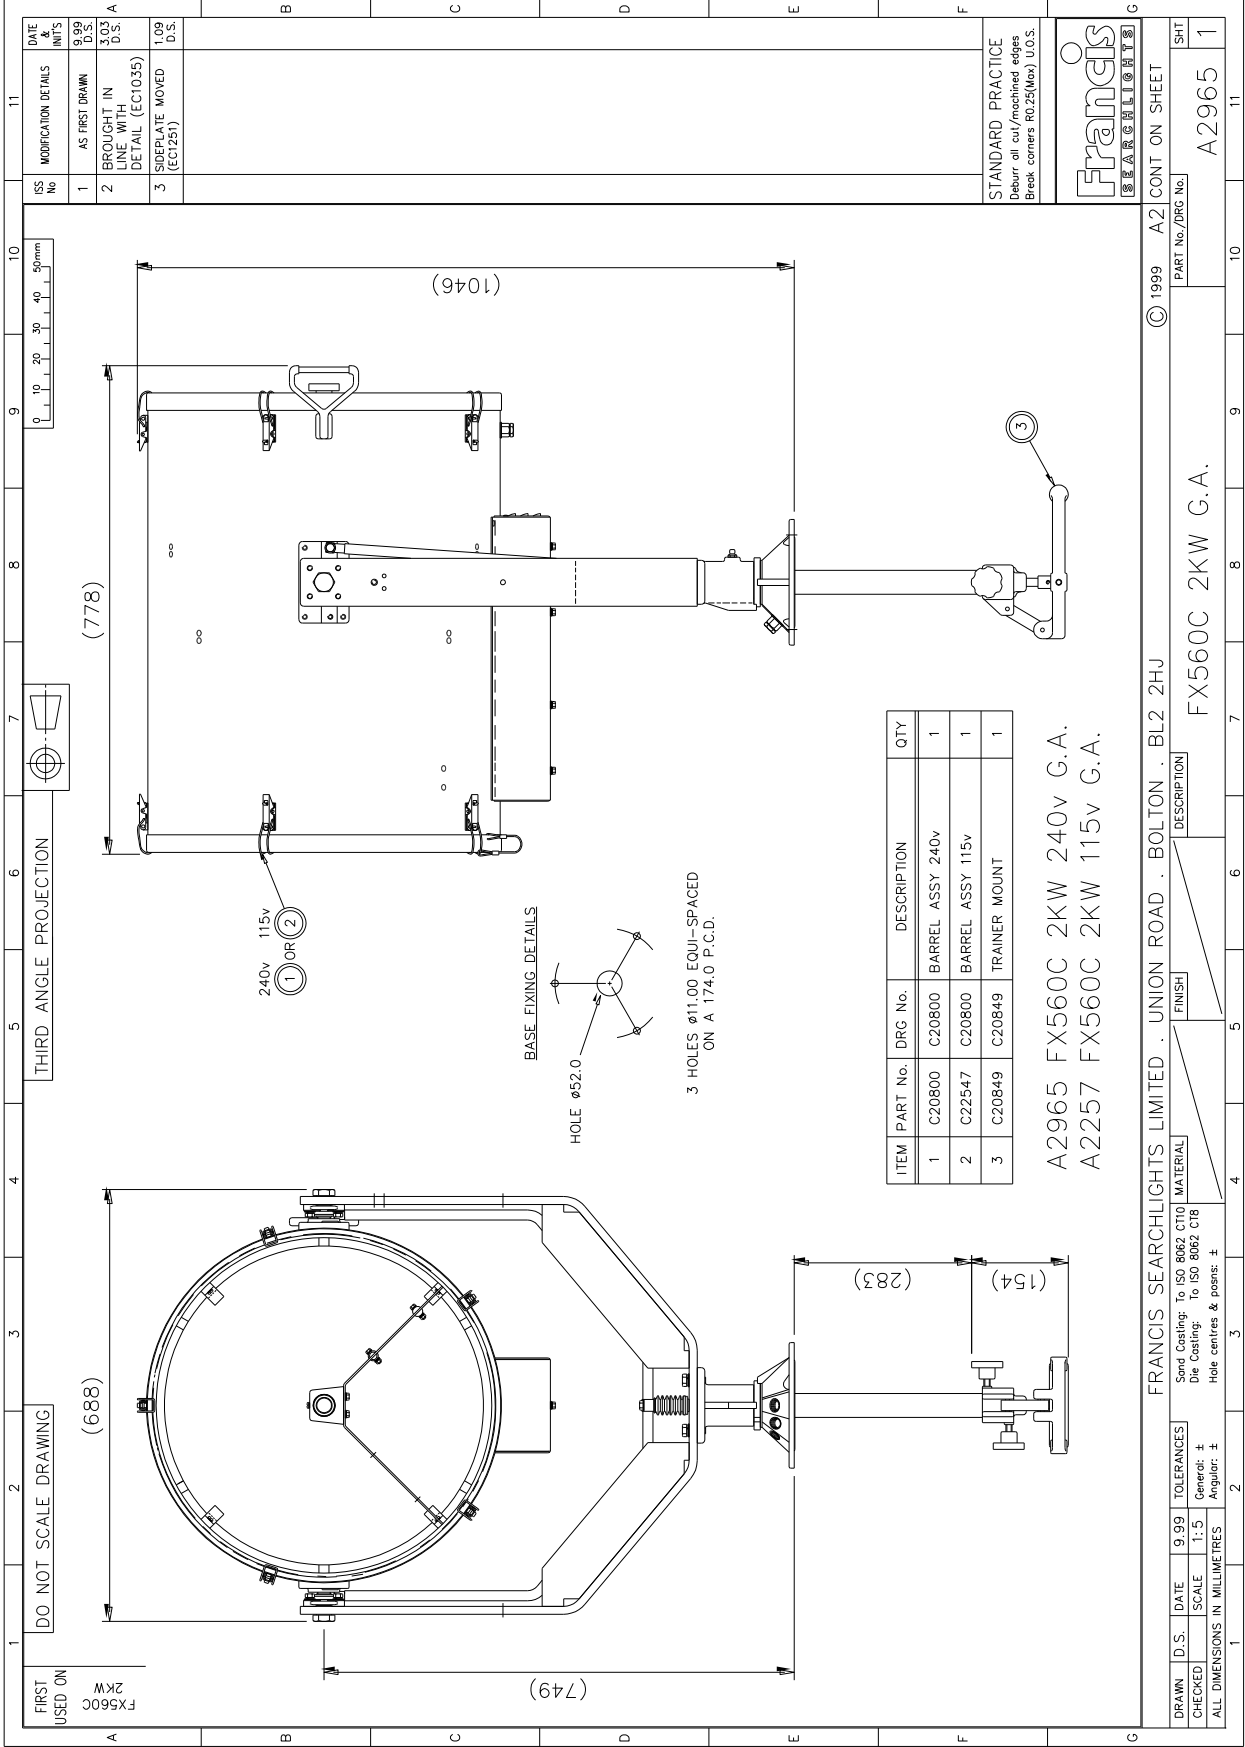


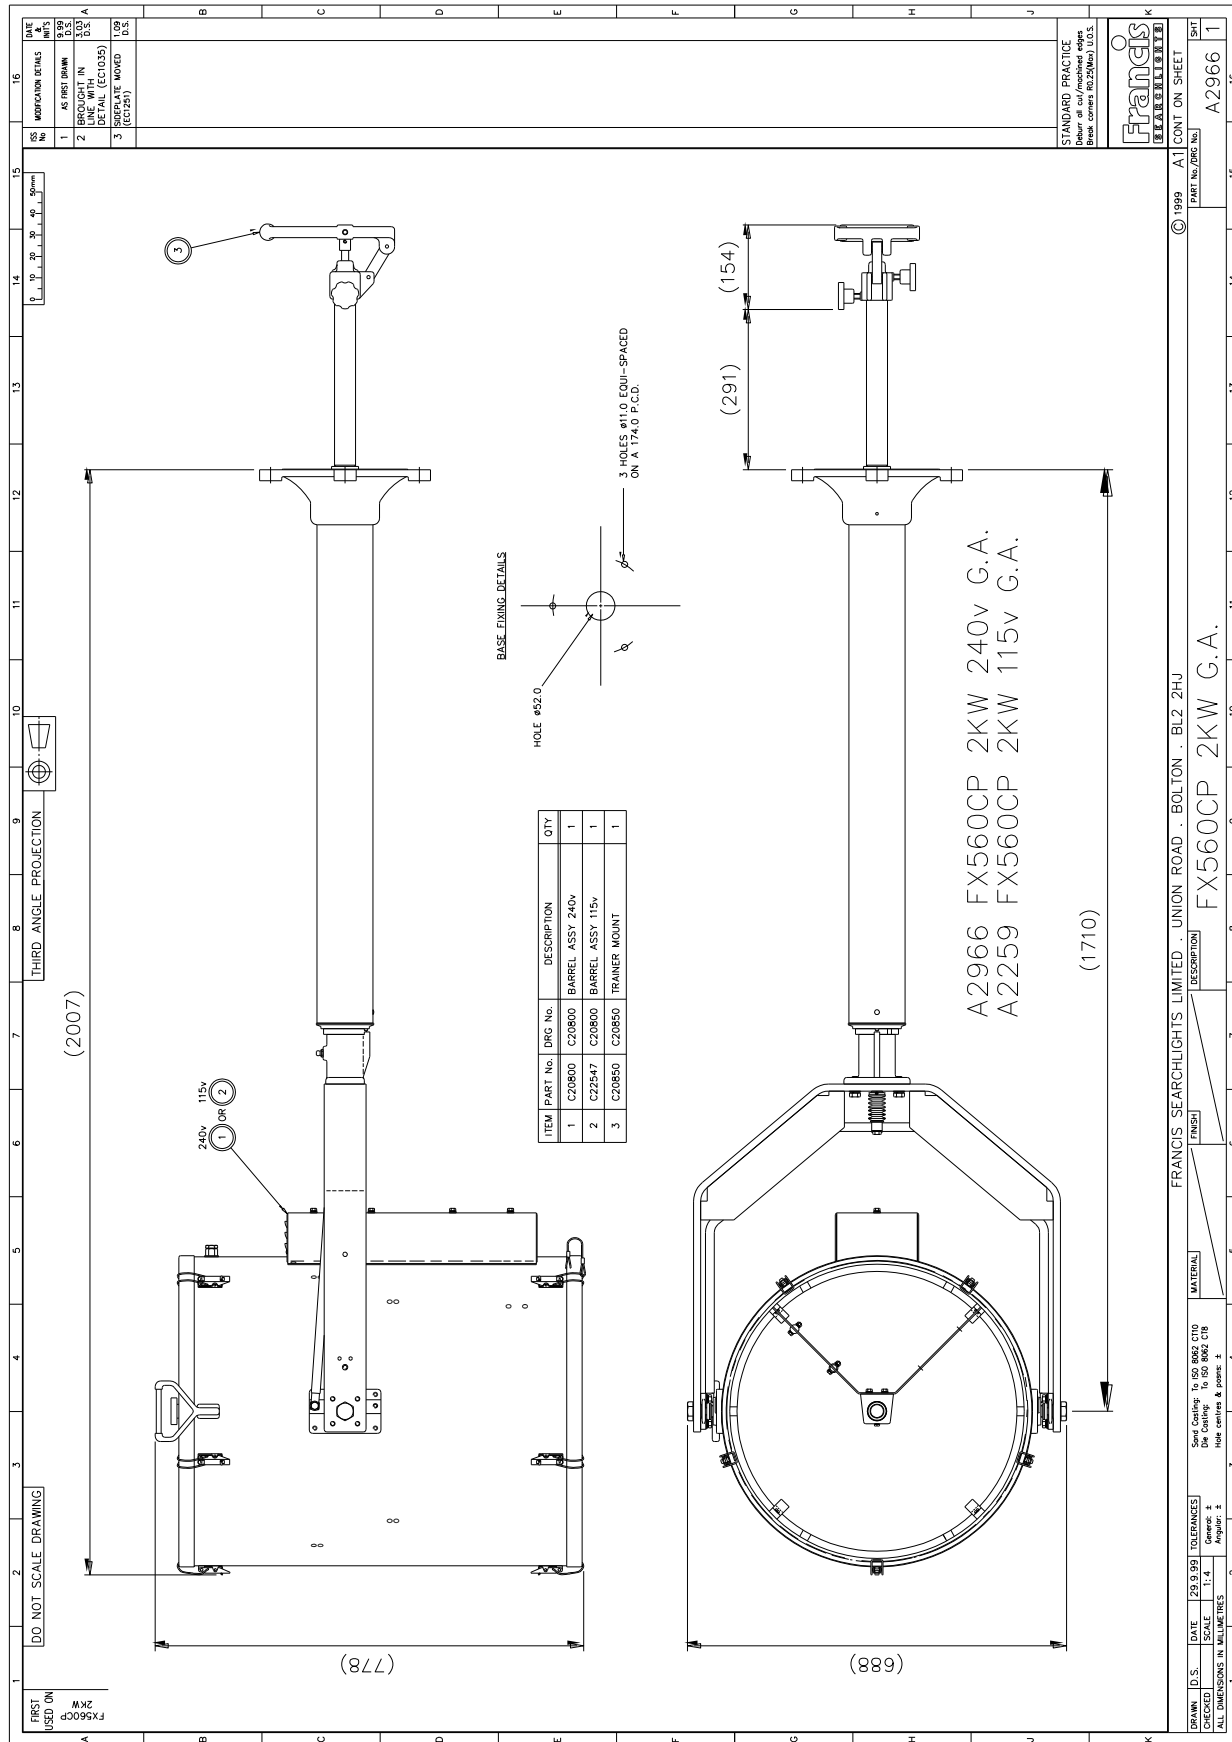


FIRST  
USED ON

FX380  
2KW

DO NOT SCALE DRAWING

THIRD ANGLE PROJ

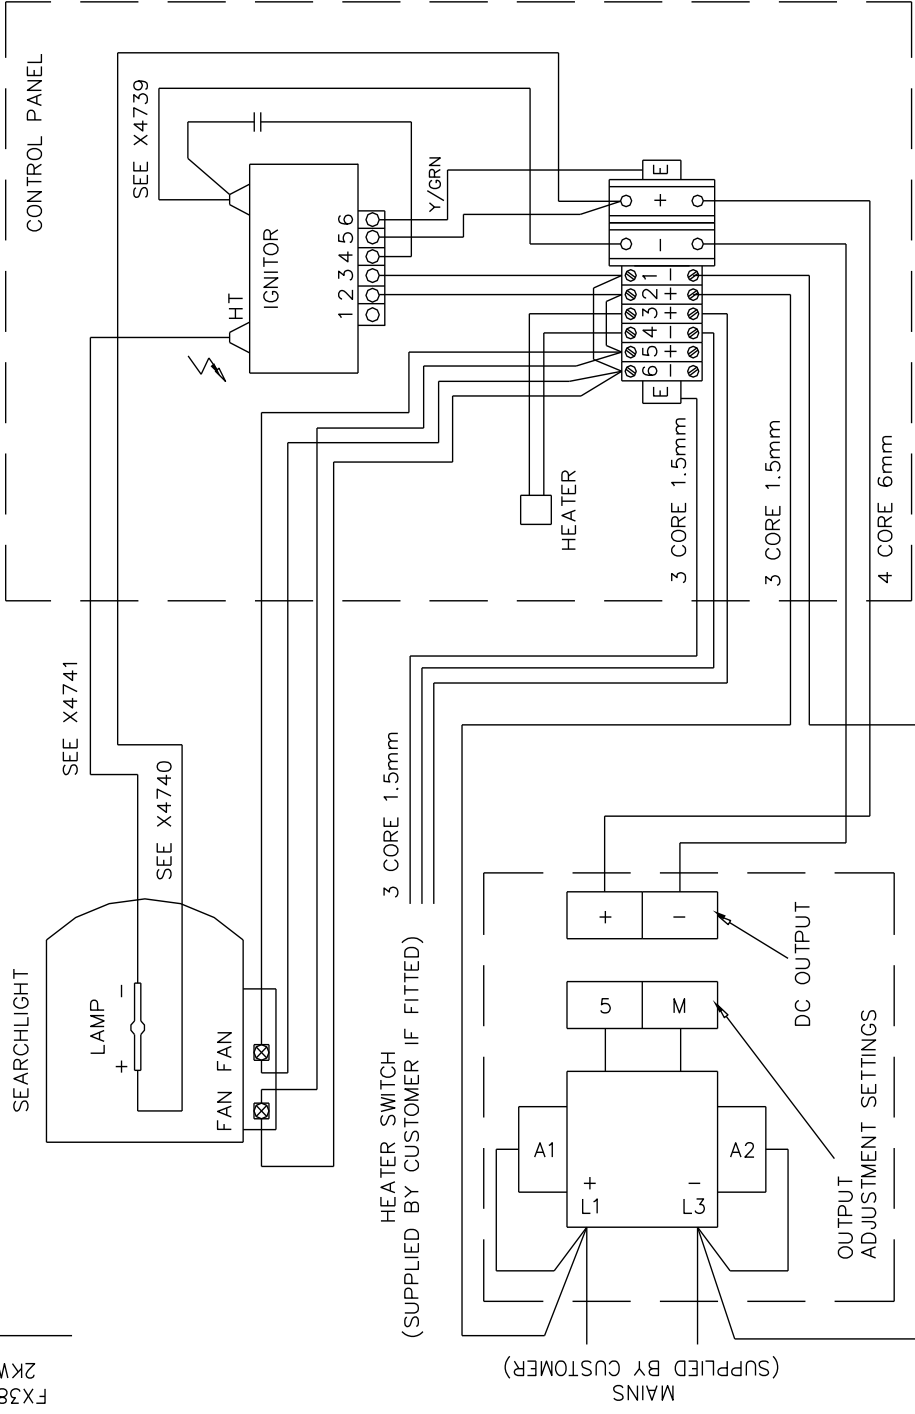

STANDARD PRACTICE

Deburr all cut/machined edges  
Break corners R0.25(Max) U.O.S.

TOLERANCES U.O.S: -

General: €

Angular: €

Hole centres &amp; posns: €

Sand Casting: To ISO 8062 CT10


Die Casting: To ISO 8062 CT8

# Francis

FRANCIS SEARCHLIGHTS LIMITED, UNION ROAD, BOLTON, BL2 2HJ



CONT ON SHEET

DRAWN	D.S.	DATE	21.6.04	MATERIAL	FINISH	DESCRIPTION	PART No./DRG No.	SHEET
CHECKED		SCALE						
ALL DIMENSIONS IN MILLIMETRES				C23114 1				

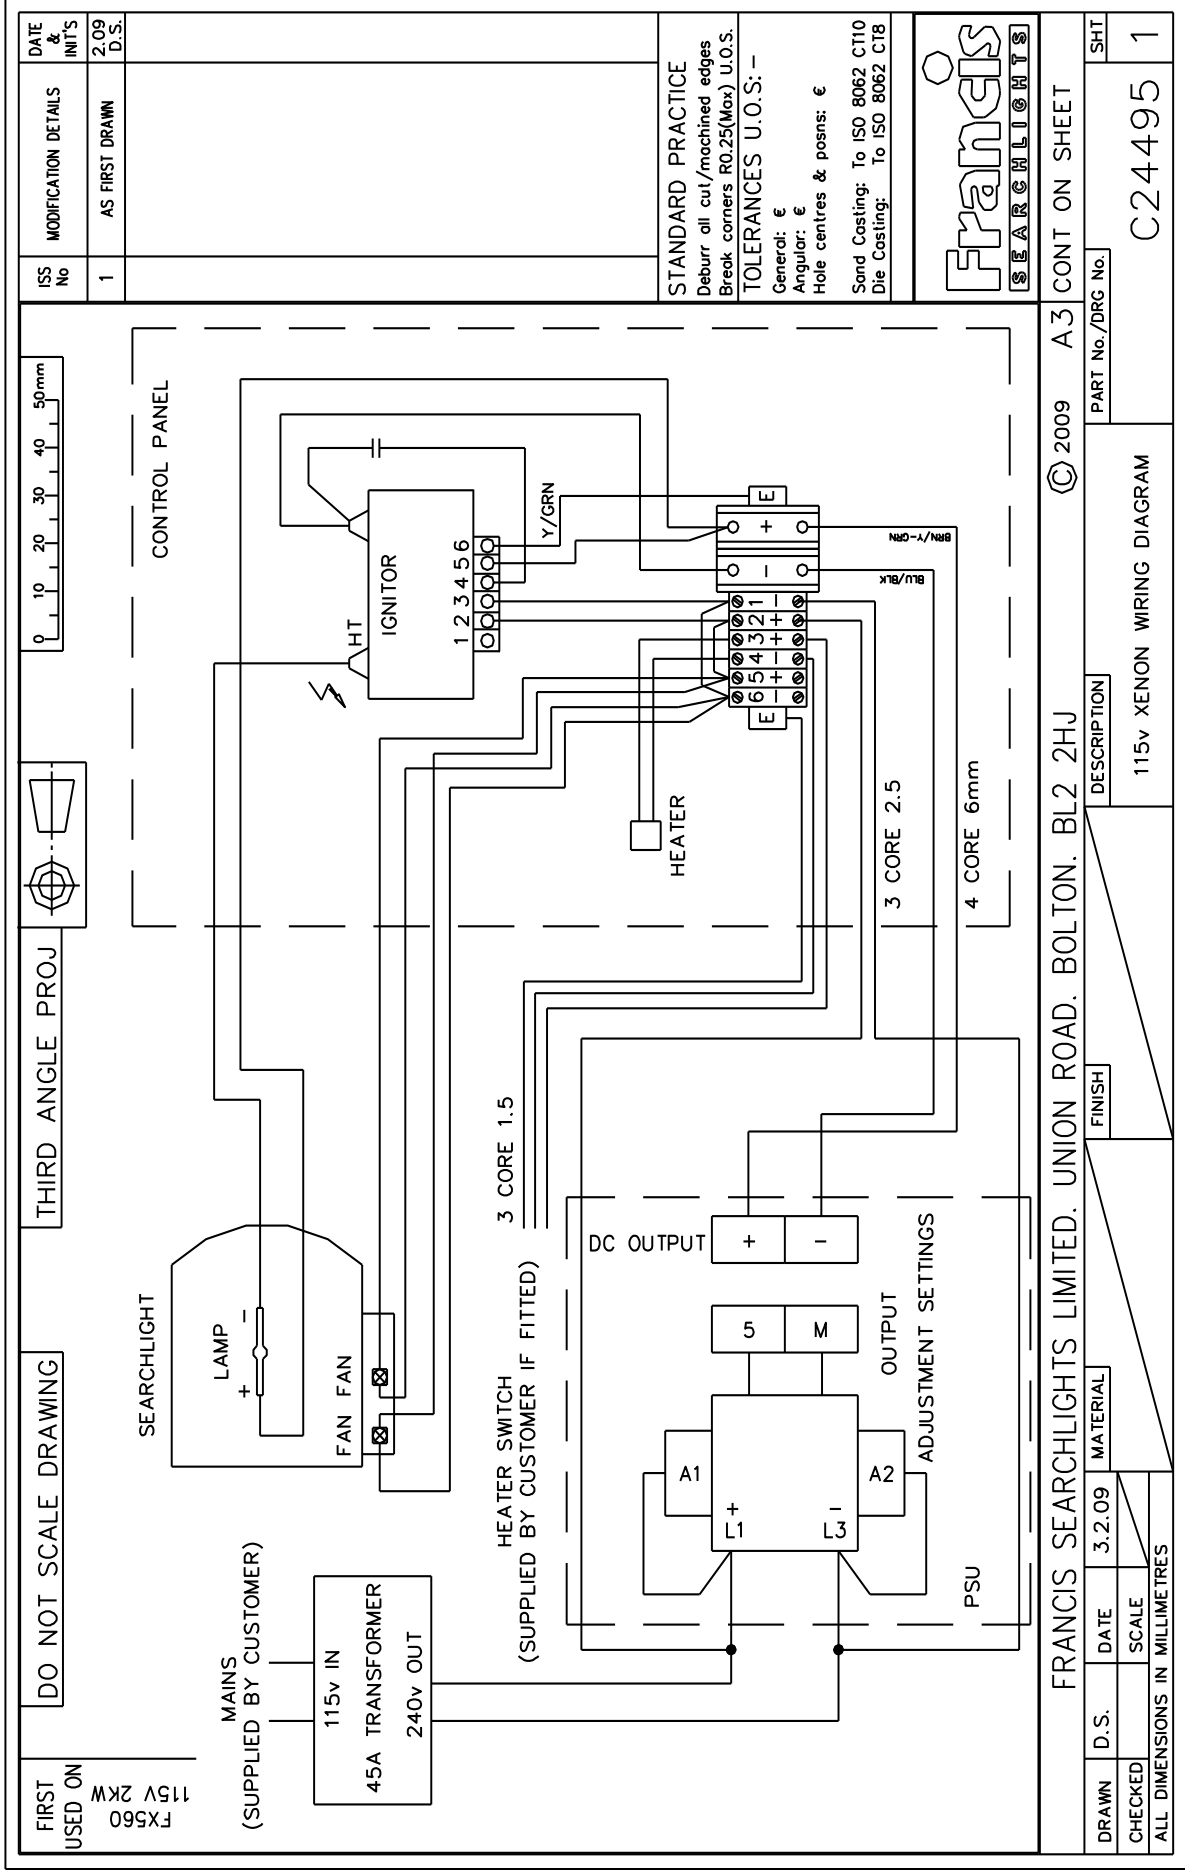

FRANCIS SEARCHLIGHTS LIMITED, UNION ROAD, BOLTON, BL2 2HJ

© 2009 A3 CONT ON SHEET

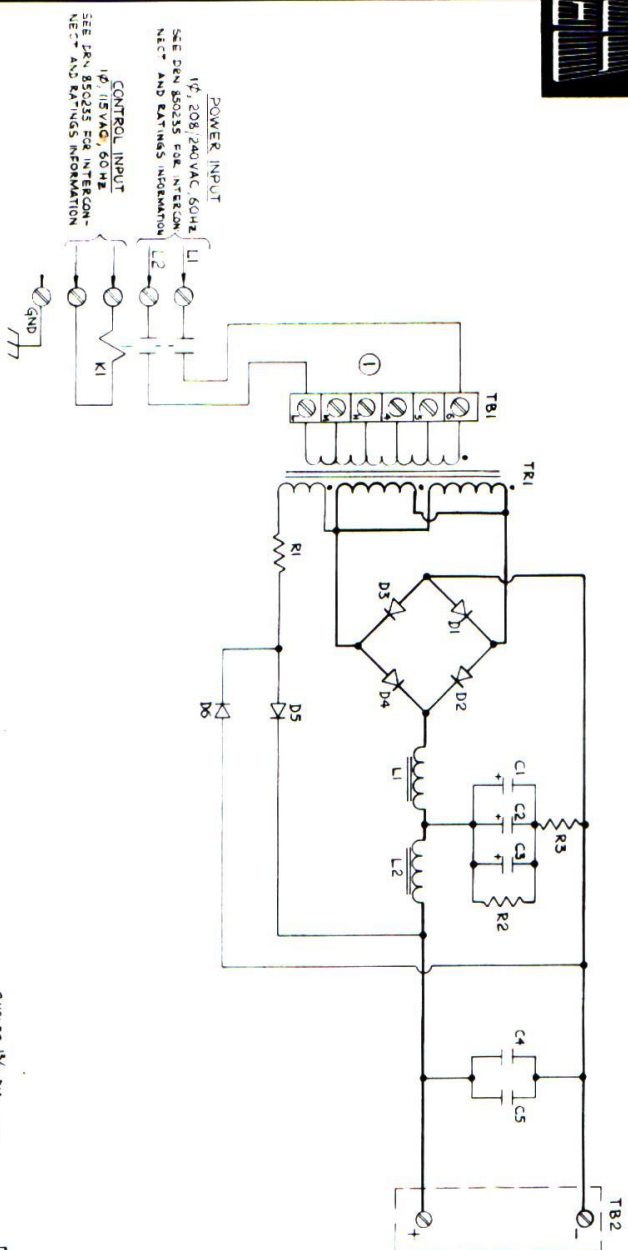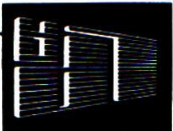

DC OUTPUT  
22-30 VOLTS  
50-85 AMPS  
400-2200 WATTS  
(SEE DEN 850235  
FOR INTERCONNECT  
AND RATING INFORMATION)


2 HOLES  $\frac{3}{16}$  DIA.  
FOR  $\frac{1}{2}$  CONDUIT FITTING  
 $\frac{1}{16}$  DIA. FOR  
 $\frac{1}{4}$  CONDUIT FITTING

WEIGHT: 145 Lbs (66 kgs)

PARTS LIST		
S-REV	DESCRIPTION	L.P.A. PIN QTY
C-3	CAPACITOR, 4000 $\mu$ F, 150V	C101 3
C-4	CAPACITOR, .005 $\mu$ F, 1KV	C102 1
C-5	CAPACITOR, 68 $\mu$ F, 400VDC	C103 1
D-1	DIODE, IN4291, 100 AMP, 400V	D101 2
D-2	DIODE, IN4291, 100 AMP, 400V	D102 2
D-3	DIODE, IN4291, 100 AMP, 400V	D103 2
K-1	CONTACTOR, 2 POLE	K101 1
L-1	COIL	L101 2
R-1	RESISTOR, WIREWOUND, 852, 100 W	R101 1
R-2	RESISTOR, WIREWOUND, 5002, 10W	R102 1
R-3	RESISTOR, METAL, 57-1P, 06-2, 20W	R103 1
TR-1	TRANSFORMER	TR101 1
TB-1	TERMINAL BLOCK, CURETIS-H-6, INPUT	TB101 1
TB-2	TERMINAL BLOCK, OUTPUT	TB201 1

NOTES:  
① OUTPUT CURRENT IS ADJUSTED BY CHANGING POSITION OF WIRES ON TB1. LETTERS H-L FOR SMALL INCREMENTS (H=HIGHEST, L=LOWEST) NUMBERS 1-6 FOR LARGE INCREMENTS (4=HIGHEST, 6=LOWEST) FOR 240VAC INPUT USE ONLY "6" OR "5". FOR 208VAC INPUT USE ANY (NORMALLY "4" OR "5")


L. P. ASSOCIATES, INC.		
SCALE	DATE	FIG. 6
DATE	6-14-83	
SCHEMATIC & PARTS LIST		
CODE IDENT	L.P.A. MODEL NO 8502	REVISION NUMBER
TR101		850201E

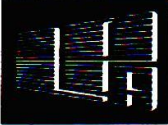

L.P. ASSOCIATES, INC.  
6650 LEXINGTON AVENUE, HOLLYWOOD, CA. 90038  
**Simplicity, by design.**

L.P. A. MODEL 8501 (SEE DRN 85001F) OR  
MODEL 8502 (SEE DWG 850201E) OR  
MODEL 8516 (SEE DWG 851601A)  
POWER SUPPLY

L.P. A. MODEL 8508 LAMPHOUSE  
(SEE DWG. 851065)

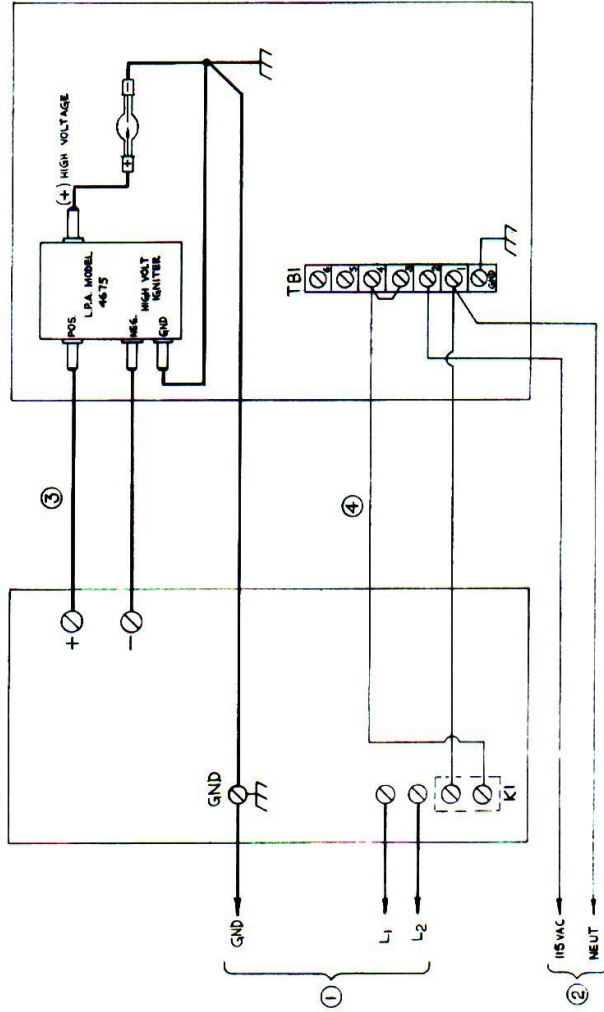

SYSTEM COMPOSITION	RATING CHART FOR 60 HZ "DOMESTIC" SYSTEM					
	8501 POWER SUPPLY 8508 LAMPHOUSE		8502 POWER SUPPLY 8510B LAMPHOUSE		8516 POWER SUPPLY 8510B LAMPHOUSE	
NOTE	DESCRIPTION	VOLT	WIRE # MAX. AMPS	WIRE # MAX. AMPS	VOLT	WIRE # MAX. AMPS
1	12 MAINS POWER INPUT	115	25	10	204/240	12
2	10 CONTROL POWER INPUT	115	3	16	115	3
3	P/S TO L/H POWER WIRING	18-26VDC 30-35 ADC	6	2	18-26VDC 40-70 ADC	2
4	P/S TO L/H CONTROL WIRING	150VDC (STARTING) 115	3	16	150VDC (STARTING) 115	3

\* SIZE WIRES TO COMPLY WITH LOCAL CODES.  
IN ABSENCE OF ANY GOVERNING CODE USE AVG  
SIZES RECOMMENDED IN CHART OR LARGER.

L. P. ASSOCIATES, INC.

FIG. 7

DATE: 6-15-83  
DRAWN BY: EG  
REVIEWED:

CONTROL WIRING & INTERCONNECTION DIAGRAM

CODE IDENT: 17465  
ILLUMINATION SYSTEMS: 850235

## 10 - Spare Parts List

The following spare parts can be ordered directly from the manufacturer:

Part Number	Description
C15392-00	Power Supply Unit (240v)
C23860-00	Step up Transformer
C12081-00	Ignitor (240v)
C12080-00	Ignitor (115v)
C20224-00	Fan (240v)
C21573-00	Fan (115v)
D20195	2Kw Xenon Lamp
C20881-00	Front Glass
C20569-00	Front/Rear Bezel Gasket
C23277-01	Heater & Fuse Assembly
C06779-00	Reflector
C20281-00	Bellows

In order to prolong the life and performance of your product, we recommend that you only specify Francis Searchlights spare parts. This will ensure that any warranties on your equipment will not be invalidated.

When ordering spare parts please contact the Sales Department at Francis Searchlights Limited. Please quote searchlight model and serial number at all times. This will enable a fast response to your spares' requirements.